

ORDER NO.

ARP2434

MULTI-PLAY COMPACT DISC PLAYER

PD-M501 PD-M551 PD-M501

PD-M601, PD-M551 AND PD-M501 HAVE THE FOLLOWING:

-		Model		Payer Partitionant Part	
Туре			PD-M501	Power Requirement	Remarks
KU	0	0	0	AC120V only	
KUXJS	0	0	0	AC120V only	
KC	0	-	0	AC120V only	
KCXJS	0	-	0	AC120V only	
WEMXJS	0	-	0	AC220V-240V	
WBXJS	0	-	-	AC220V-240V	
RD	-	-	0	AC110-127V, 220-240V (switchable)	
WPW	-	_	0	AC220V-240V	

- ◆ This manual is applicable to the following: PD-M601/KU, KUXJS, KC and KCXJS; PD-M551/KU and KUXJS; PD-M501/KU, KUXJS, KC and KCXJS.
- ◆ For the following: PD-M601/KUXJS, KC and KCXJS; PD-M551/KU and KUXJS; PD-M501/KU, KUXJS, KC and KCXJS, refer to page 39.
- For the other types, refer to applicable service manuals.

CONTENTS

1. SAFETY INFORMATION 3	8. ADJUSTMENTS 2
2. EXPLODED VIEWS AND PARTS LIST5	
3. PACKING 11	
4. IC INFORMATION 12	
5. SCHEMATIC DIAGRAM 13	10. PANEL FACILITIES 42
6. P.C.BOARDS CONNECTION DIAGRAM 19	11. SPECIFICATION43
7. PCB PARTS LIST	

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

Lead in solder used in this product is listed by the California Health and Welfare agency as a known reproductive toxicant which may cause birth defects or other reproductive harm (California Health & Safety Code, Section 25249.5).

When servicing or handling circuit boards and other components which contain lead in solder, avoid unprotected skin contact with the solder. Also, when soldering do not inhale any smoke or fumes produced.

1. SAFETY INFORMATION


(FOR USA MODEL ONLY)-

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

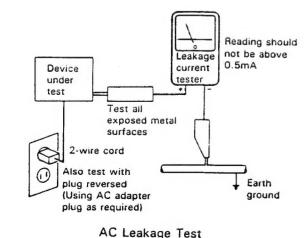

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection not the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a \triangle on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which dose not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

(FOR EUROPEAN MODEL ONLY)

AVATTAESSA JA SUOJALUKITUS
OHITETTAESSA OLET ALTTIINA
NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.
ÄLÄ KATSO SÄTEESEEN.

DADVERSEL:

USYNLIG LASERSTRÅLING VED ÅBNING

NÅR SIKKERHEDSAFBRYDERE ER UDE AF

FUNKTION UNDGÅ UDSAETTELSE FOR

STRÅLING

VARNING!

OSYNLIG LASERSTRÄLNING NÄR DENNA
DEL ÄR ÖPPNAD OCH SPÄRREN
ÄR URKOPPLAD. BETRAKTA EJ STRÅLEN.

Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersateilylle. Alä katso sateeseel

VARNING!

synlig lasersträlning när denna de

WEMXJS type

*

LASER Kuva 1 Lasersateilyn varoitusmerkki WARNING!

DEVICE INCLUDES LASER DIODE WHICH EMITS INVISIBLE INFRARED RADIATION WHICH IS DANGEROUS TO EYES. THERE IS A WARNING SIGN ACCORDING TO PICTURE 1 INSIDE THE DEVICE CLOSE TO THE LASER DIODE.



Picture 1
Warning sign for

THIS PIONEER APPARATUS CONTAINS
LASER OF CLASS 1.

SERVICING OPERATION OF THE APPARATUS SHOULD BE DONE BY A SPECIALLY INSTRUCTED PERSON.

LASER DIODE CHARACTERISTICS -MAXIMUM OUTPUT POWER: 5 mw WAVELENGTH: 780-785 nm

LABEL CHECK (MULTI MAGAZINE type)

WEMXJS type

ADVARSEL
USYNLIG LASERSTRÄLING VED ABNING NÄR SIXIERHED SAF
BRYDERE ER UDE AF FUNKTION.
UNDGA UDSÆTTELSE FOR STRALING.
VORSICHT!

UNSICHTBARE LASER-STRAHLUNG TRITT AUS, WEIN DECKEL (DOER KLAPPE) GEÖFFRET IST! NICHT DEM STRAHL AUSSETZEN! VRW1104

WBXJS type

CAUTION
INVISIBLE LASER
RADIATION WHEN OPEN,
AVOID EXPOSURE
TO BEAM PRW1018

Additional Laser Caution

Laser Interlock Mechanism


The ON/OFF (ON: low level,OFF: high level) status of the LPS1 (S601) and LPS2 (S602) switches for detecting the loading state is detected by the system microprocessor, and the design prevents laser diode oscillation when both switches LPS1 and LPS2 are not ON (low level) (clamped state).

Thus, interlock will no longer function if switches LPS1 (S601) and LPS2 (S602) are deliberately shorted.

The interlock also does not operate in the test mode * . Laser diode oscillation will continue, if pins 1 and 2 of M51593FP (IC101) on the preamplifier board loaded on pick up assembly are connected to GND, or pin 19 is connected to low level (ON), or else the terminals of Q101 are shorted to each other (fault condition).


 When the cover is opened with the servo mechanism block removed to be turned over, close viewing of the objective lens with the naked eye will cause exposure to a Class 1 laser beam.
 M1

* : Refer to page 28.

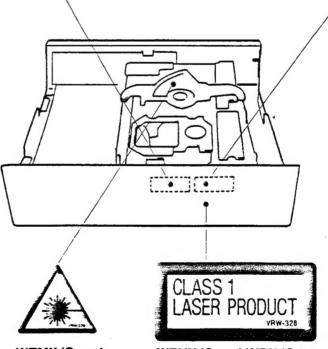

WEMXJS and WBXJS types

WEMXJS and WBXJS types

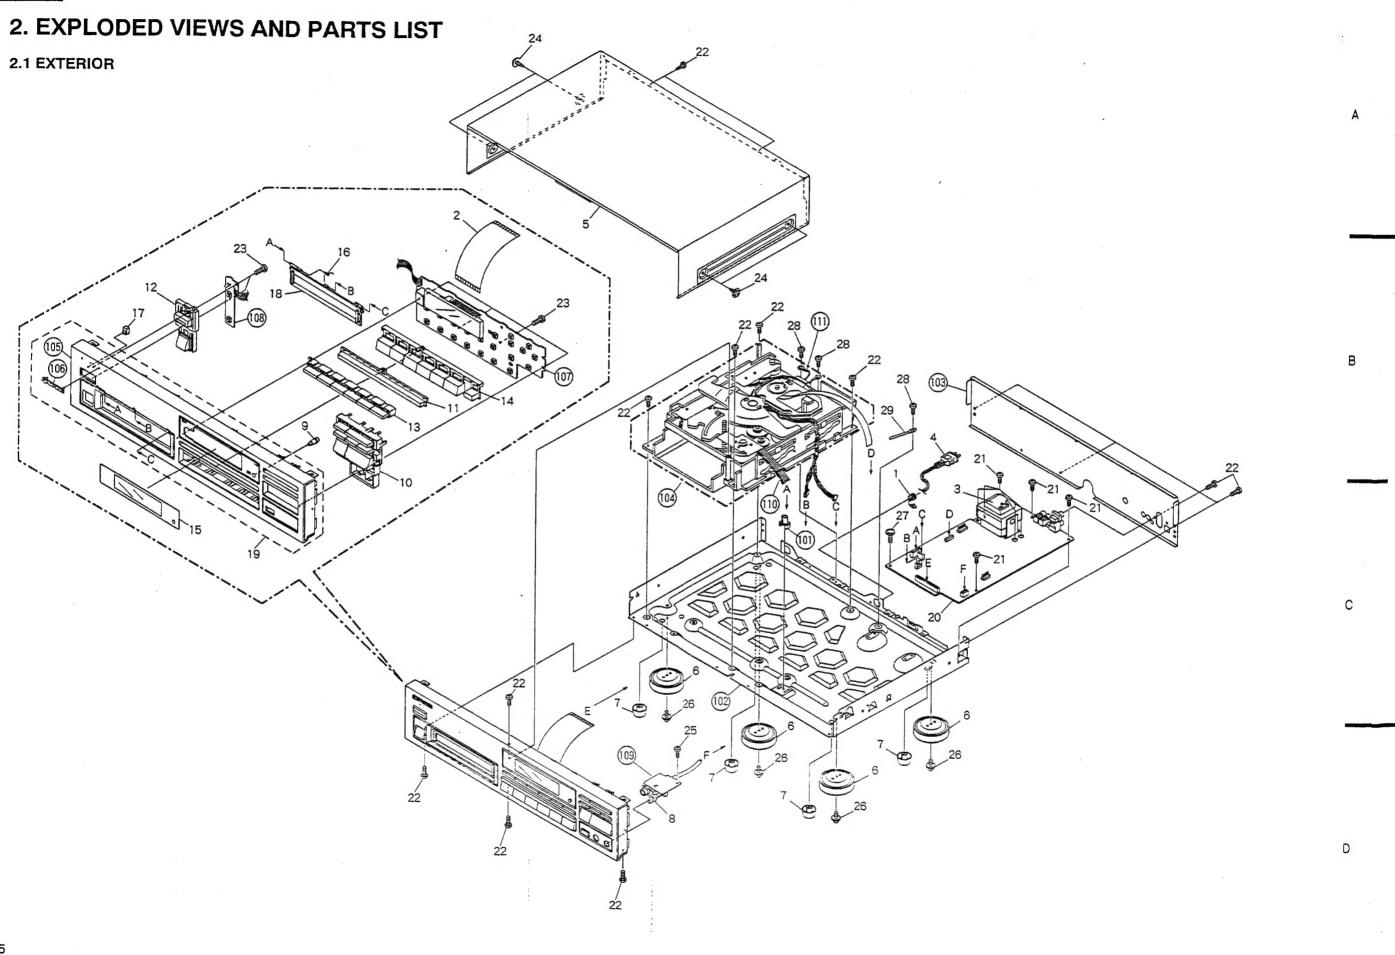




NOTES:

- The parts with an encircled number are generally unavaliable because they are not in our Master Spare Parts List.
 The ∆ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

 • Parts marked by "• " are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

Parts List


<u>Mark</u>	No.	Description	Part No.	Mark	No.	Description	Part No.
Δ	1	Strain relief	CM-22		101	PCB mould	AMR1525
	2	32P F.F.C /30V	PDD1125		102	Under base	PNA1751
$\stackrel{\Delta}{\Delta}$	3	Power transformer	PTT1235		103	Rear base	PNA1752
$oldsymbol{\Lambda}$	4	Power cord with plug	RDG1010		104	Multi mechanism assembly	PXA1429
	5	Bonnet	PYY1149		105	Function panel	PNW2139
	6	Insulator (For PD - M601, M551)	PNW1912		106 107	Name plate Function board assembly	PAM1407 PWZ2291
	7	Leg assembly (For PD - M501)	PXA1201		108 109	Switch board assembly Headphone board assembly	PWZ2296 PWZ2300
	8	Knob (Headphone)	PAC1370		110 111	Flat cable (6P) Earth lead unit	D20PYY0615E XDF-502
	9	Time button B	PAC1549			Laith lead difft	ADF-302
	10	Play button A	PAC1633				
	11	Fix button	PAC1639				
	12	Power button A	PAC1642				
	13	Disc button	PAC1643				
	14	Program button	PAC1646				
	15	Display window	PAM1550				
	16	Spring(Door)	PBH1022				
	17	LED lens	PNW2019				
	18	Door	PNW2138				
_	19	Function panel assembly	PEA1195				
\odot	20	Mother board assembly	PWM1583				
	21	Screw	BBZ30P060FMC				
	22	Screw	BBZ30P080FZK				
	23	Screw	PPZ30P120FMC				
	24	Screw	FBT40P080FZK				
	25	Screw	IBZ30P060FCC				
	26	Screw	IBZ30P100FCC				
	27	Screw	IBZ30P180FMC				
	28	Screw	PDZ30P050FMC				
	29	Cord clamper	RNH-184				

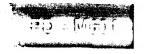

2.2 MULTI MECHANISM ASSEMBLY

Parts List

Motor pulley	<u>Mark</u>	No.	Description	Part No.	Mark No.	Description	Part No.
Gear holder		1	Motor pulley	PNW1634	49	Guide bar	DI A1004
Second		2					
Cam gear							
Section				DVI//1033			
6 Top guide PNW1914 54 Pinion gear PNW2055 PWB loider Gear pulley PNW1918 55 PWB loider PNW2057 PNW1919 56 Carriage DC motor / 0.3W PNW1920 7 PRW1920 7 PRW1							PNW2053
Gear pulley		3	Dell	PEB1138	53	Gear 3	PNW2054
Second Cara							PNW2055
Sear Sear Sear Sear Sear Sear Sear Sear						PWB holder	PNW2057
Gear L PNW1920 FDRH1107 Spindle with oil) PEA1207				PNW1919	56	Carriage DC motor / 0.3W	_
10 Eject spring PBH1107 (spindle with oil)			Gear L	PNW1920	57	D.C. motor assembly	
12 Seven bar		10	Eject spring	PBH1107		(spindle with oil)	
12 Seven bar PNW1931 59 Disc table assembly PEA1035			Switch lever	PNW1927	58	Pickup assembly	PFA1179
13 Sub rotary lever PNW1931 60 Screw BBZ26F060FMC BRZ26F060FMC BRZ26F06MC		12	Seven bar	PNW1931		Disc table assembly	
Sub rotary lever spring		13	Sub rotary lever				
15 Rotary lever PNW1932 62 Serew BFZ26P100FMC		14	Sub rotary lever spring				
16							
Motor screw				114W1932	02	Screw	BPZ26P100FMC
Motor screw					63	Screw	JF7.17P025F7.K
Holder lever spring PBH1110 Disc holder PNW1924 Disc holder PNW1925 Disc holder PNW1925 Disc holder PNW1925 Disc holder PNW1925 Disc holder PEB1014 Disc holder PEB1014 Disc holder PEB1014 Disc holder PEB1014 Disc holder PEB1032 Disc holder PNB1306				PBA-112	64	Screw	
Disc holder			Holder lever spring	PBH1110	65		
21		19	Disc holder	PNW1924			W 112D032D023
Page		20	Cushion A	PED1001			
22 Float rubber PEB1014 102 Eject lever PNB1306 23 Float rubber PEB1132 103 Upper chassis PNB1267 PN		21	Holder lever	PNW1925	101	Motor	1/20/11/22
23		22	Float rubber				
Float screw							
25 Release lever PNW1934 Secretary PAA1417 Release spring PBH1106 105 Loading board assembly PWZ2038 27 Clamper cam PNW1922 106 Sub chassis PNW2027 28 Clamper holder PNW1921 107 Rubber tube PEB1171 PNW2027 29 Clamper spring PBH1109 108 Main chassis PNW2027 29 Clamper PNW1857 109 Select board assembly PWZ2039 20 Clamper PNW1857 20 Select board assembly PWZ2039 20 Clamper PNW1917 20 Motor board assembly PWZ2039 20 Clamper PNW1915 20 Clamper PNW1916 20 Clamper PNW1926 20 Clamper PNW19303 20 Clamper PNW1926 20 Clamper PNW19303 20 Clamper PNW1926 20 Clamper PNW19303 20 Clamper PNW19303 20 Clamper PNW1926 20 Clamper PNW19303 20 Clamper PNW1926 20 Clamper PNW19303 20 Clamper PNW19303 20 Clamper PNW1926 20							
Release spring					104		PXA1417
Clamper cam		26	Release spring	DDU1104	105	•	
28						Loading board assembly	
Clamper spring PBH1109 108 Main chassis PNW2026							PNW2027
Clamper PNW1857 109 Select board assembly PWZ2039			Clamper holder				PEB1171
10						Main chassis	PNW2026
32 Lock spring PBH1108 111 Mechanism board assembly PWX1192		30	Clamper	PNW1857	109	Select board assembly	PWZ2039
32 Lock spring PBH1108 111 Mechanism board assembly PWX1192		31	Lock lever	PNW1917	110	Motor heard assembly	DW72040
Stair L PNW1915 112 Earth lead unit PDF1118		32				Machaniam based assembly	
Stair R						Footblood wait	
Synchronize lever							
Motor assembly						Clamp magnet	
(LOADING, DISC SELECT) 37		J J	Synchronize level	FINW 1920	114	Gear stopper	PNB1303
(LOADING, DISC SELECT) 37		36			115	Yoke M	PNR1312
37							
38		37					
39 Screw BBZ30P060FMC 40 Washer WT26D047D025 41 Washer WA31D054D025 42 E ring Z39-010 43 Screw IPZ30P080FMC 44 Rubber spacer PEB1178 45 Rubber spacer PEB1179 46 Silent ring PBK1093 47 Washer WA62D130D025					117	Carnage base	PNW2058
41 Washer WA31D054D025 42 E ring Z39-010 43 Screw IPZ30P080FMC 44 Rubber spacer PEB1178 45 Rubber spacer PEB1179 46 Silent ring PBK1093 47 Washer WA62D130D025							
41 Washer WA31D054D025 42 E ring Z39-010 43 Screw IPZ30P080FMC 44 Rubber spacer PEB1178 45 Rubber spacer PEB1179 46 Silent ring PBK1093 47 Washer WA62D130D025		40	Washer	WT26D047D026			
42 E ring Z39-010 43 Screw IPZ30P030FMC 44 Rubber spacer PEB1178 45 Rubber spacer PEB1179 46 Silent ring PBK1093 47 Washer WA62D130D025		_					
43 Screw IPZ30P080FMC 44 Rubber spacer PEB1178 45 Rubber spacer PEB1179 46 Silent ring PBK1093 47 Washer WA62D130D025							
44 Rubber spacer PEB1178 45 Rubber spacer PEB1179 46 Silent ring PBK1093 47 Washer WA62D130D025							
45 Rubber spacer PEB1179 46 Silent ring PBK1093 47 Washer WA62D130D025		43	Screw	IPZ30P080FMC			
46 Silent ring PBK1093 47 Washer WA62D130D025							
47 Washer WA62D130D025				PEB1179			
47 Washer WA62D130D025		46		PBK1093			
		47	Washer	WA62D130D025			
		48	Earth spring				

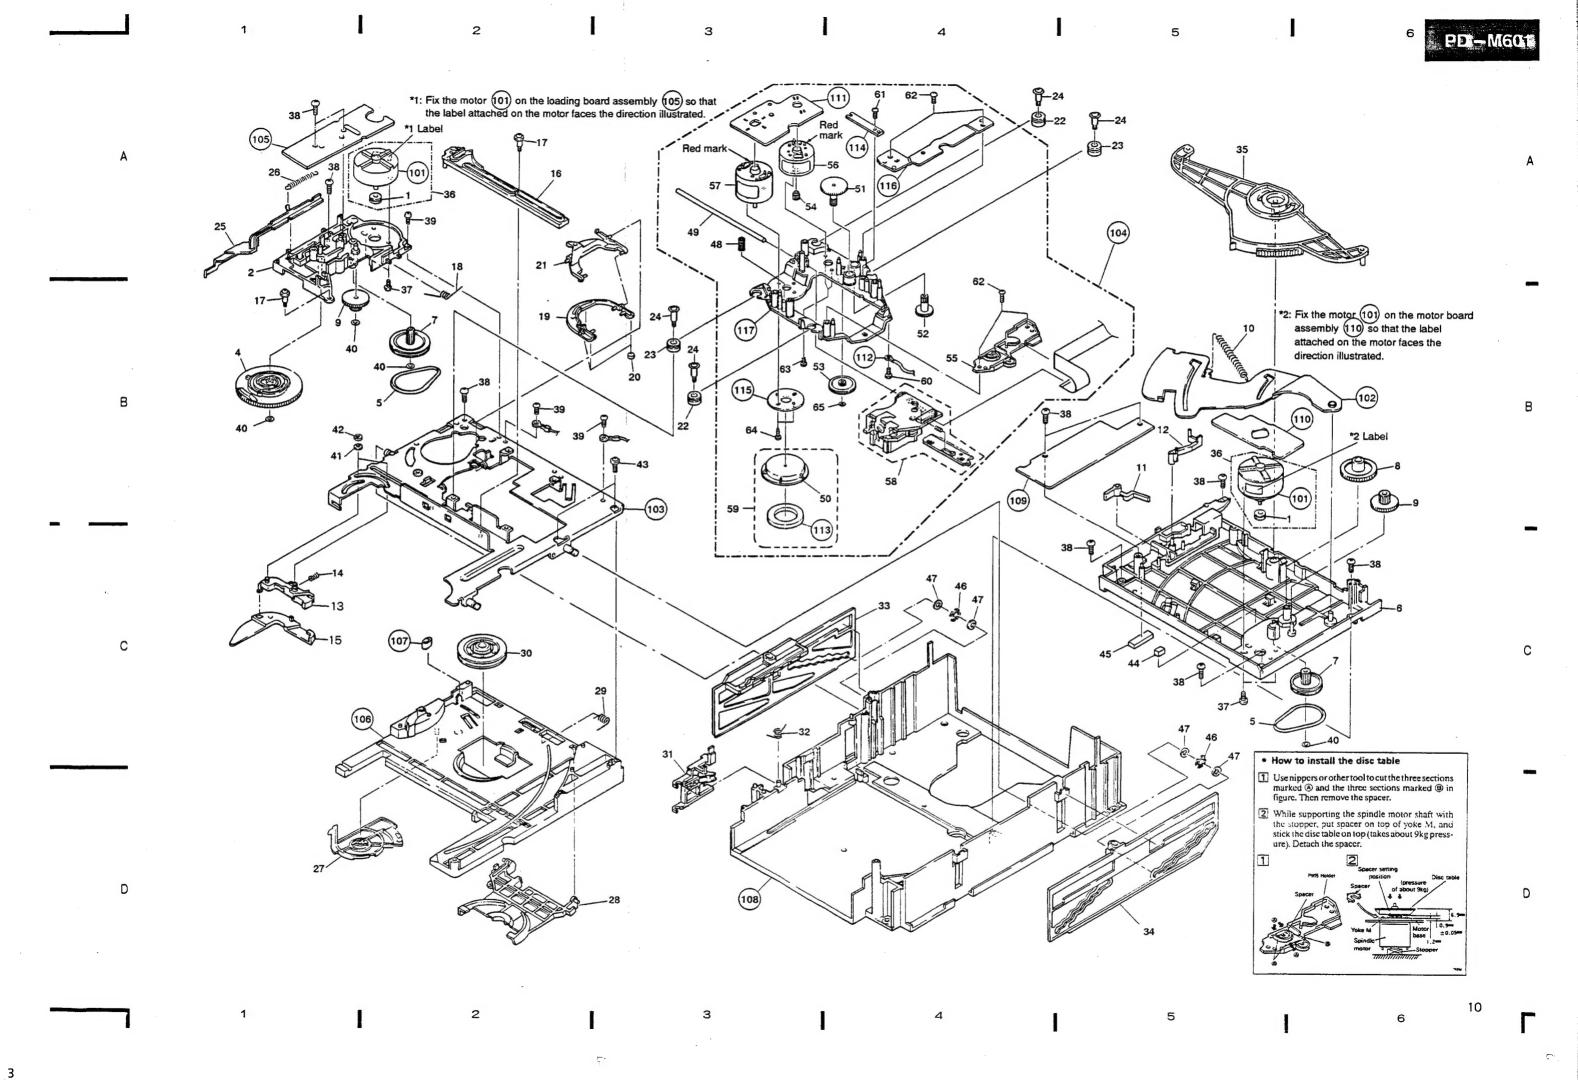




3. PACKING

Parts List

<u> Mark</u>	No.	Description	Part No.	Mark No.	Description	Part No.
	1	Connection cord with mini plug	PDE-319	9	CD packing case	PHG1753
	_			10	Mirror mat sheet	Z23-007
	2	Connection cord with pin plug	PDE1109	. 11	PP case	PYY1141
	3	Remote control unit	PWW1068			
	4	Battery cover	PZN1010			
				101	Dry cell battery(R03, AAA)	VEM-022
	5	Magazine assembly	PXA1308		21) 001 041101)(1005,7441)	V 12111 022
	6	Operating instructions (English)	PRB1166			
	7	Styrol protector (F)	PHA1198			
	8	Styrol protector (R)	PHA1199		•	

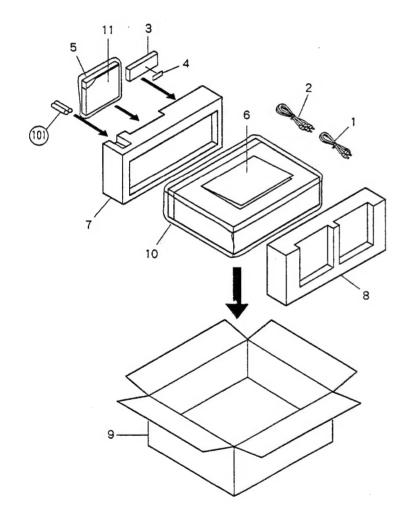

4. IC INFORMATION

PD4396B (IC351) System control

• Pin Function

No.	Mark	Pin Name	1/0	Function	No.	Mark	Pin Name	1/0	Function	
1	RESET	REST		CPU reset (L: reset)	33	P02/S0	DATA	0	Serial output of LSI control data	
2	T0	DG1			34	P03/S1	soso	1	Serial input of subcode Q data	
3	T1	DG2			35	P10/IN	RMDT	1	Remote control data input	
4	T2	DG3			36	P11	SCOR	1	Subcode synch. S0 + S1 input	
5	T3	DG4			37	P12	INSD	1	Slider inside SW input (L : INSIDE)	
6	T4	DG5	0*	DIGIT output for FL drive	38	P13	FCOK	1	Focus OK input (H: OK, L: NG)	
7	T5	DG6		Digit output for PL drive	39	P20	LIN			
8	T6	DG7			40	P21	LOUT	0	Disc tray IN / OUT *1	
9	17	DG8			41	P22	DSDW		_	
10	T8	DG9			42	P23	DSUP	0	Disc selector UP/DOWN *2	
11	T9	DG10			43	P30	LPS2			
12	PH3	MUTE	0	Muting output (L: Mute, H: OFF)	44	P31	LPS1	1	Load position SW input *3	
13	PH2	SYC3	0	Synchro output	45	P32	DCNT		Disc selector count pulse *4	
14	PH1			NC (Not used.)	46	P33	DCHM	1	Disc selector home *4	
15	PHO	STBL	0	Standby LED output (L : Goes off, H :Light),	47	P60	MZS2	1	Magazine discrimination *5	
16	S11	SL	0*	SECMENT	48	P61	MZS1		SW input	
17	\$10	SK	U.	SEGMENT output for FL drive	49	P62	SENS	1	Multi mode input of LSI operation state	
18	VLOAD			- 26V	50	P63	GFS	1	Frame sync. lock input (H: OK, L: NG	
19	VPRE			- 5V	51	P40	MUTE		Muting output (H: Mute, L: OFF)	
20	\$9	SJ			52	P41	DLAT		Latch pulse for D/A converter IC	
21	\$8	SI			53	P42	XLAT	0	Latch pulse of LSI control data	
22	\$7	SD	0*	CECNENT	54	P43	XRST		LSI reset (L: Reset, H: Release)	
23	\$6	sc	0-	SEGMENT output for FL drive	55	PP0	LDON		Laser diode output (H: OFF, L: ON)	
24		SB			56	X1	X1			
25	\$4	SA			57	X2	X2		Main system clock oscillation	
26	VDD	VDD		+5V	58	vss	VSS		GND	
27	S3	SH			59	XT1			GND (Not used.)	
28	S2	SG	0*	SECMENT output for El debre	60	XT2	_		NC (Not used.)	
29	S1	SF	U	SEGMENT output for FL drive	61	P50	KD0/TEST	_	Key scan input and TEST mode required input	
30	SO	SE			62	P51	KD1			
31	P00	SYNC1	1	Synchro input	63	P52	KD2	1	Key scan input	
32	SCK	CLOK	0	Serial clock	64	P53	KD3		ney scall input	

O*: Output terminals with pull-down resistor.

*1 : Loading selector

Tray	LOUT	LIN
IN OUT STOP	L H L	H L L

*2 : Disc selector	UP	/ DOWN
--------------------	----	--------

Calantan	DSDW	DSUP
Selector UP DOWN STOP	L H L	H L L

*3 : Loading position SW

	LPS1	L PS2
CLAMP	L	L
LOADING	L	н
HOME	Н	н
EJECT	Н	L

*4 : DISC select

	DCNT	DCHM
2 - 6 DISC	L	H
HOME	L	L
During select	H	*

*5 : Magazine discrimination

	MZS1	MZS2
Magazine OUT	Н	*
IN MULTI	L	Н
IN SINGLE	L	L

5. SCHEMATIC DIAGRAM


5.1 Waveforms


Note: The encircled numbers denote measuring points in the schematic diagram.

- *1 50T-JUMP: After switching to the pause mode, press the manual search key.
- *2 FOCUS-IN:Press the key without loading a disc.
- GND – GND - GND – GND
- *3 POWER ON:Plug AC cord into AC wall socket.


IC401 - Pin 10:PLAY MODE (1kHz)


*4 POWER OFF: Unplug AC cord form AC wall socket.

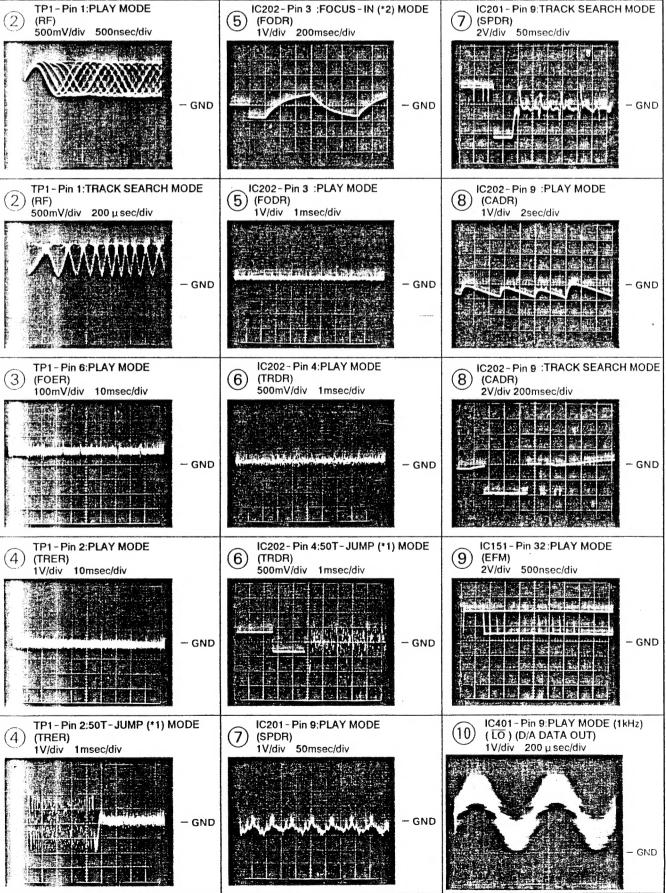

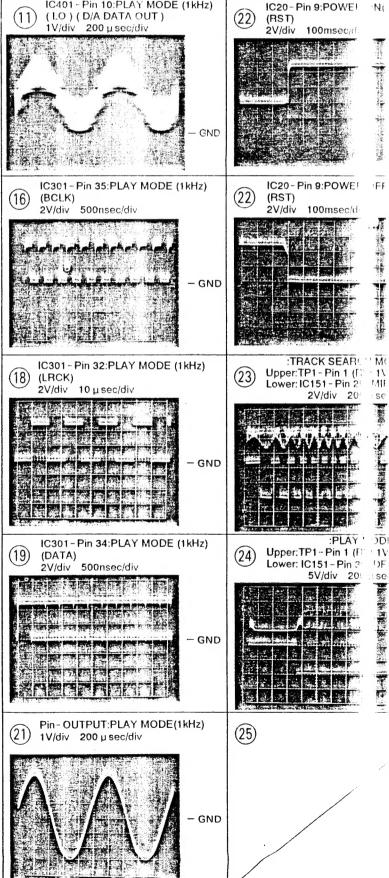




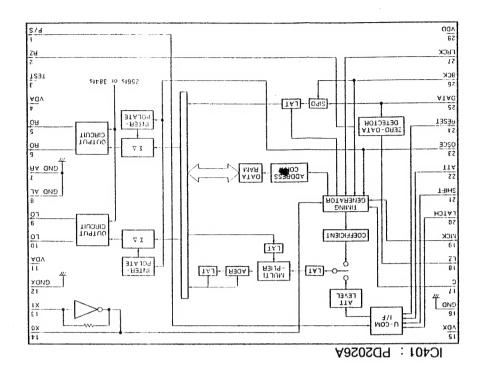

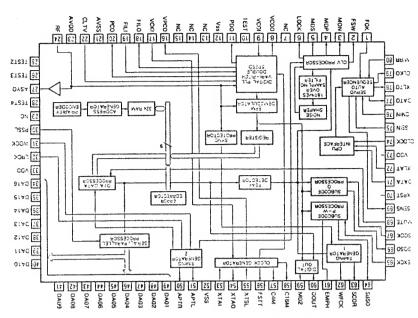

IC301: CXDS200PQ

IC BLOCK DIAGRAMS

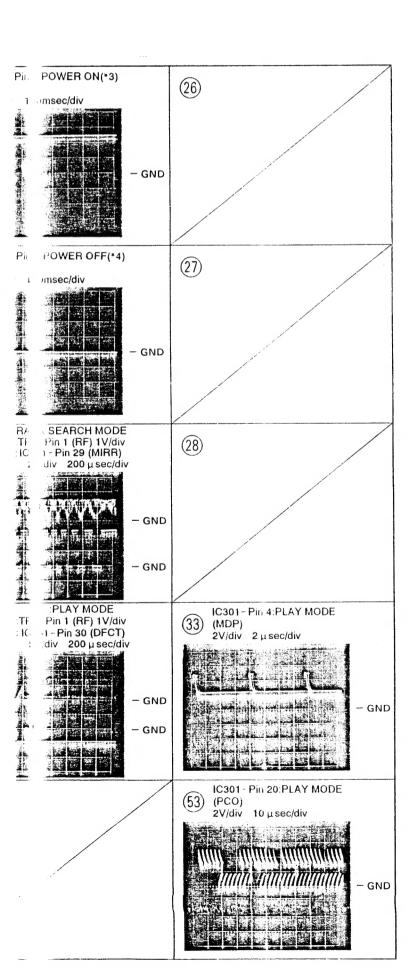

1. RESISTORS: Indicated in Ω , 1/4W, 1/6W and 1/8W, \pm 5% tolerance unless otherwise noted k ; k $\,\Omega\,$, M; M Ω , (F); \pm 1%, (G); \pm 2%, (K); \pm 10%, (M); \pm 20% tolerance.

Indicated in capacity (µF) / voltage(V)unless otherwise noted p; pF. Indication without voltage is 50V except electrolytic capacitor.

3. VOLTAGE, CURRENT:

; DC voltage (V) at play state.

; DC current at play state. Value in () is DC current at stop state

4. OTHERS:

→ ; Signal route.

The $\stackrel{\wedge}{=}$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

zi: marked capacitors and resistors have parts numbers.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

5. SWITCHES: (The underlined indicates the switch position)

LOADING BOARD ASSEMBLY

S601: LPS1

S602: LPS2

SELECT BOARD ASSEMBLY

\$603 : MZ\$1 S604: MZS2

S605 : DCHM

S606 : DCNT

MECHANISM BOARD ASSEMBLY S610 : INSIDE

FUNCTION BOARD ASSEMBLY S701 : DISC2

S702 : DISC1

S703 : AUTO FADER

S704 : DELETE S705 : PROGRAM

S717: COMPU PGM EDIT

S718: HI - LITE SCAN S719 : DISC 3

S720 : DISC 4

S721 : ADLC \$722 : TIME FADE EDIT

S723 : DISC 5

S724 : DISC 6

S725: [] (PAUSE) S726: REPEAT


S727 : (STOP)

S728 : TIME

S729: ▶ (PLAY)

S730: RANDOM PLAY


S731: | < < (TRACK/MANUAL SEARCH) S732: ▶▶ ▶► (TRACK/MANUAL SEARCH)

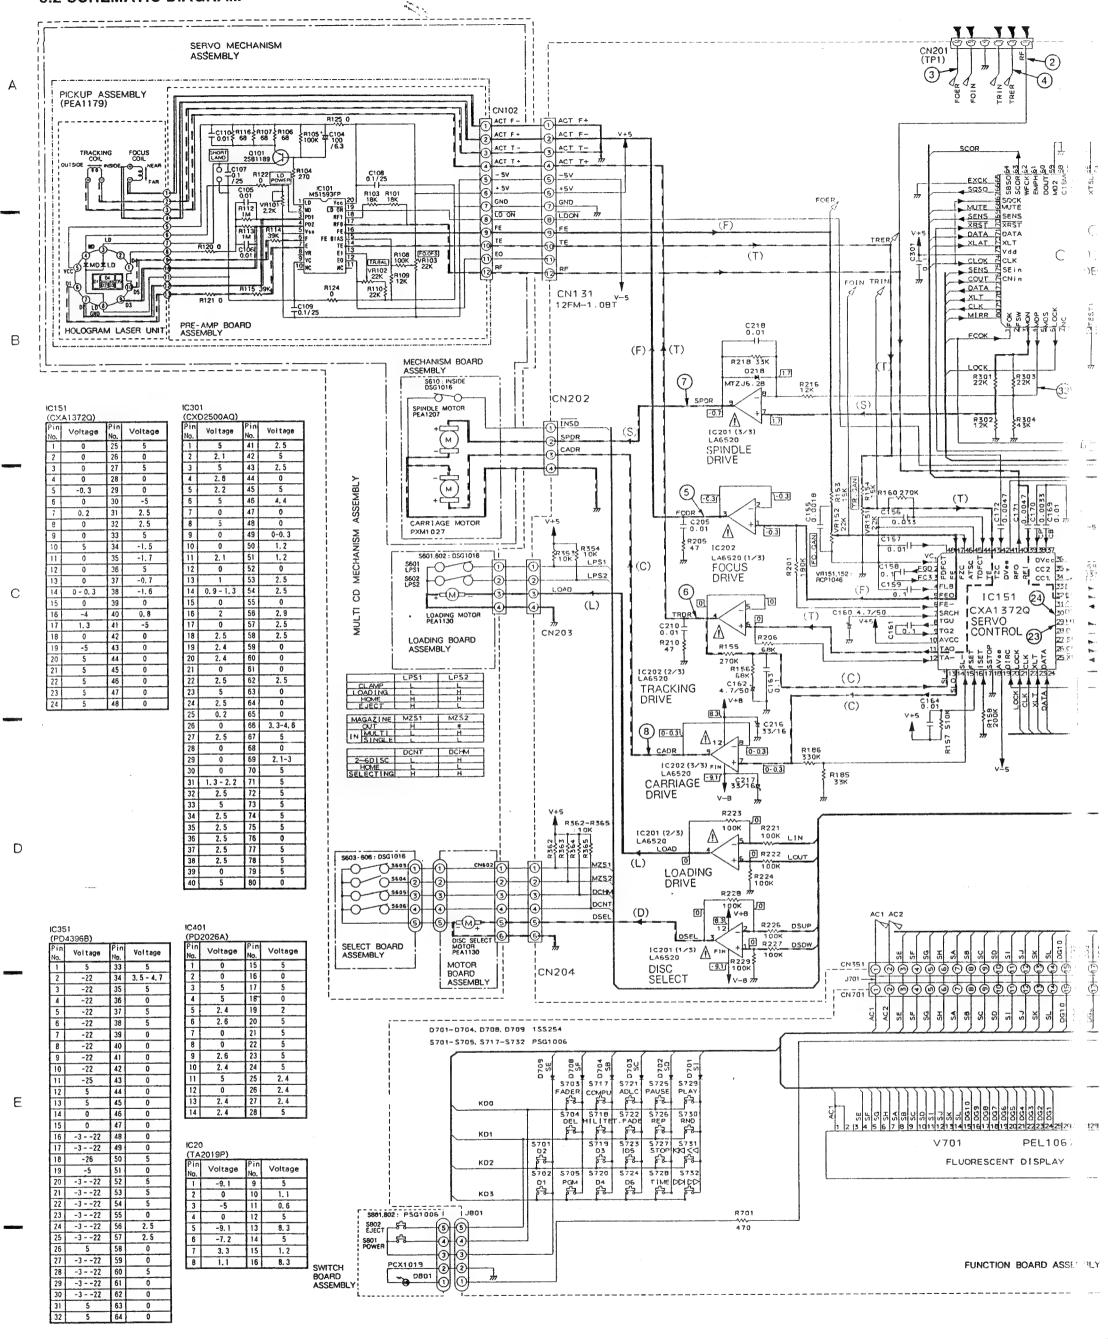

16

F

3

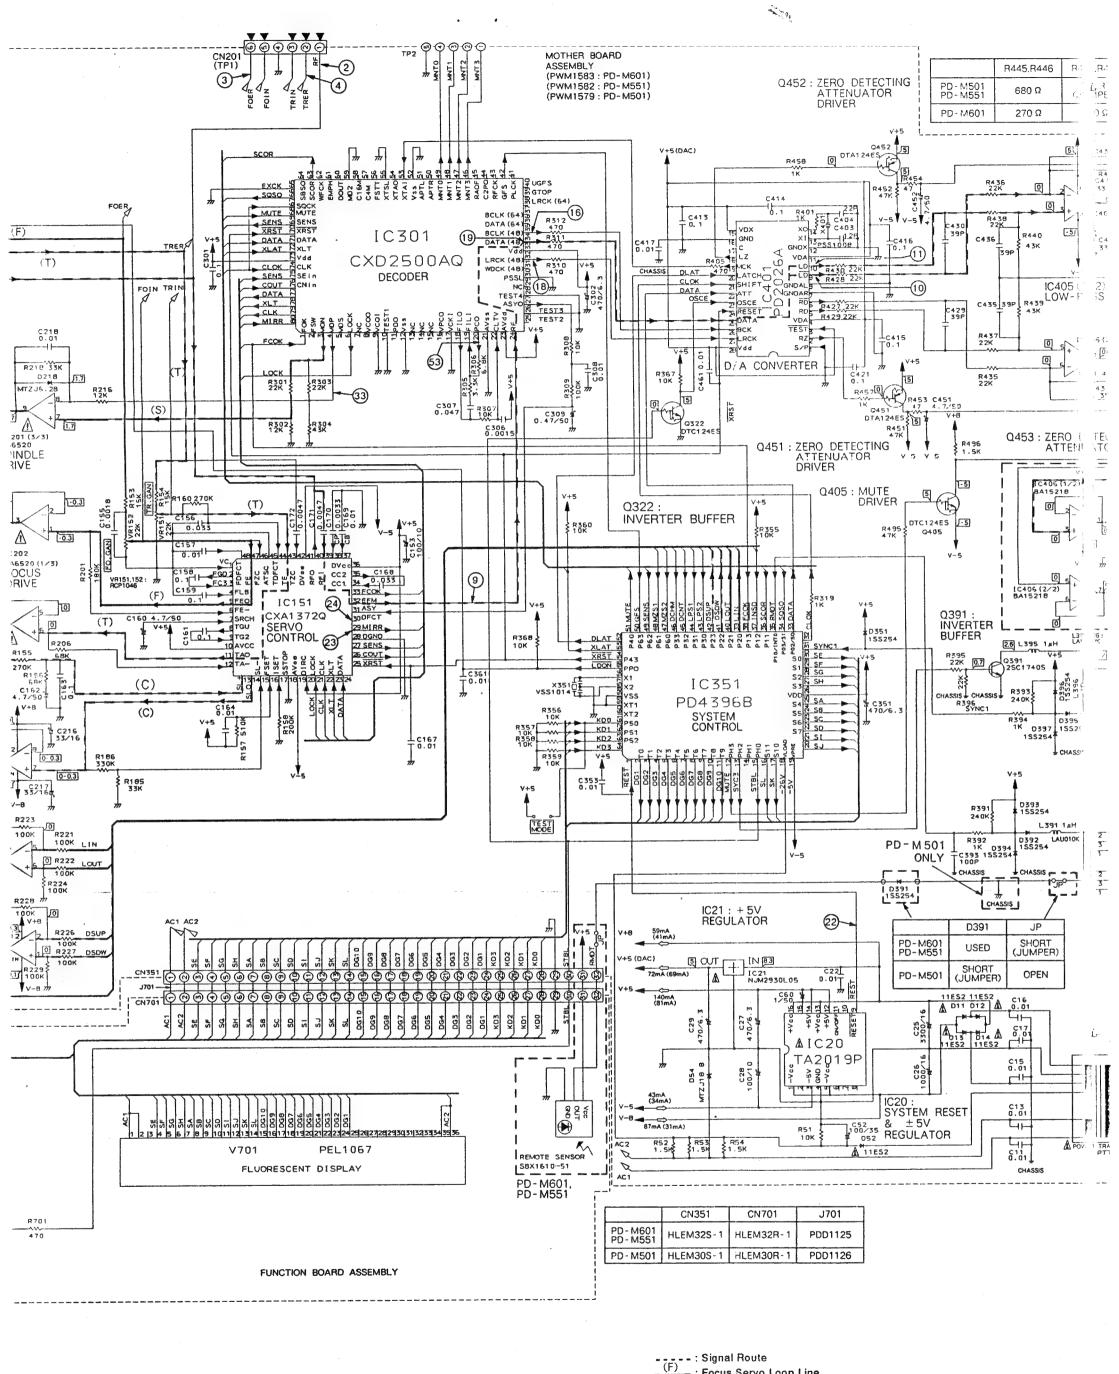


- : Focus Servo Loop Line (L) : Loading Motor Route

(T) : Tracking Servo Loop Line (S) : Spindle Motor Route

(C) __: Carriage Motor Route (D) : Disc Select Motor Route > : Measurement Point

5

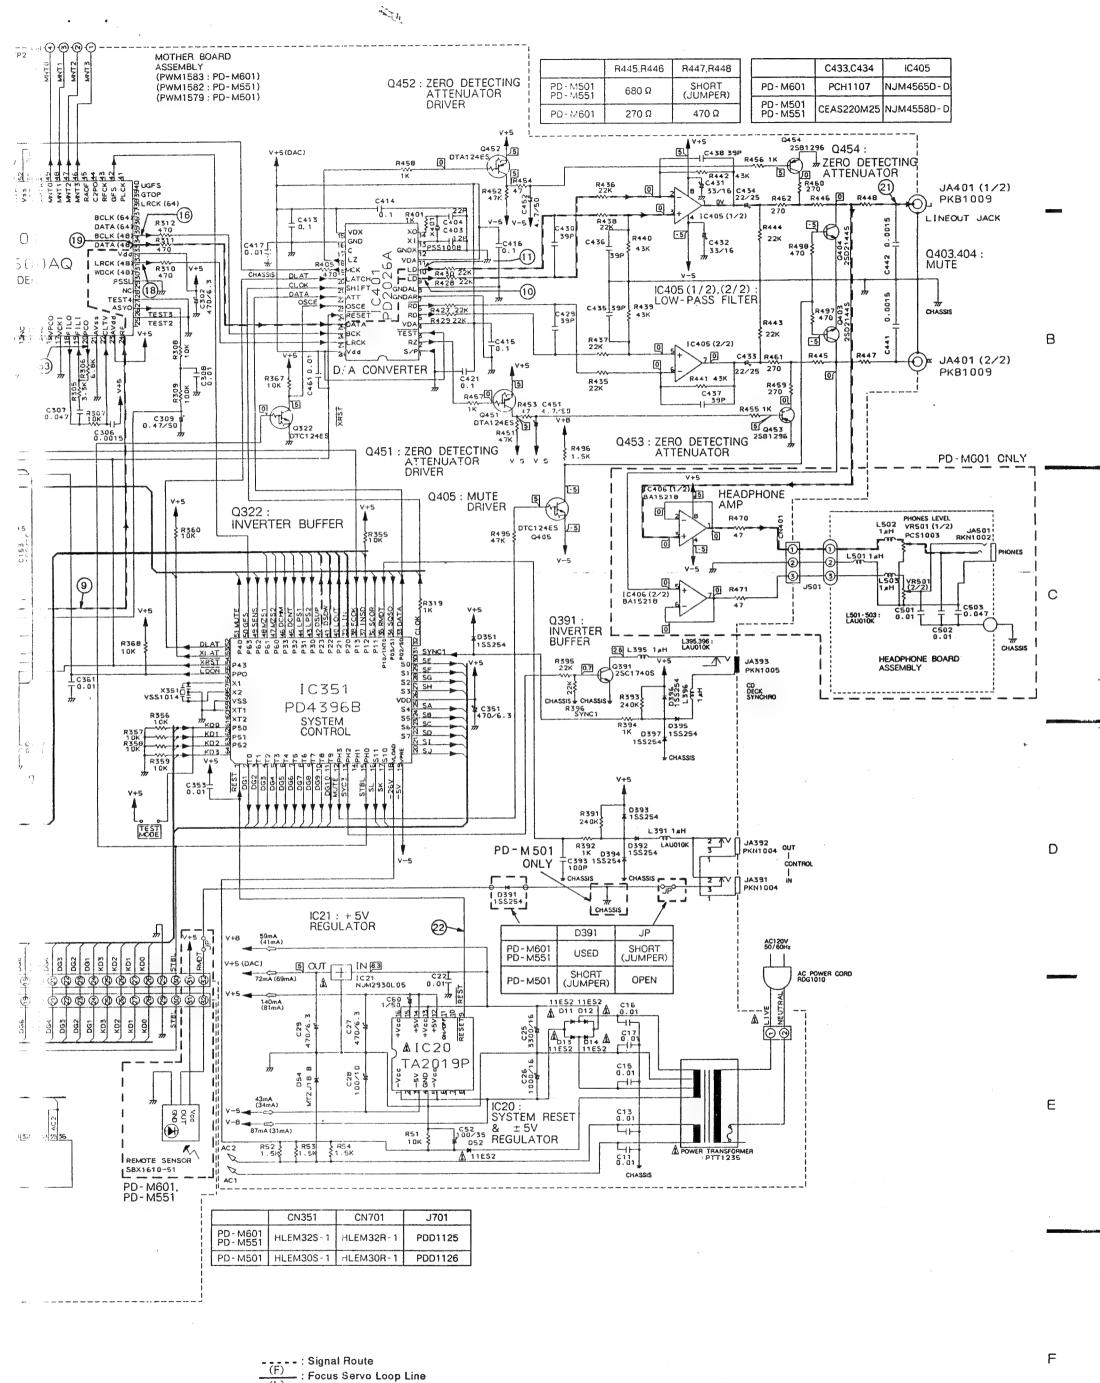


> : Measurement Point


6


(L) : Loading Motor Route (T) --: Tracking Servo Loop Line 🗕 : Spindle Motor Route (C) : Carriage Motor Route (D) _ : Disc Select Motor Route


7


8

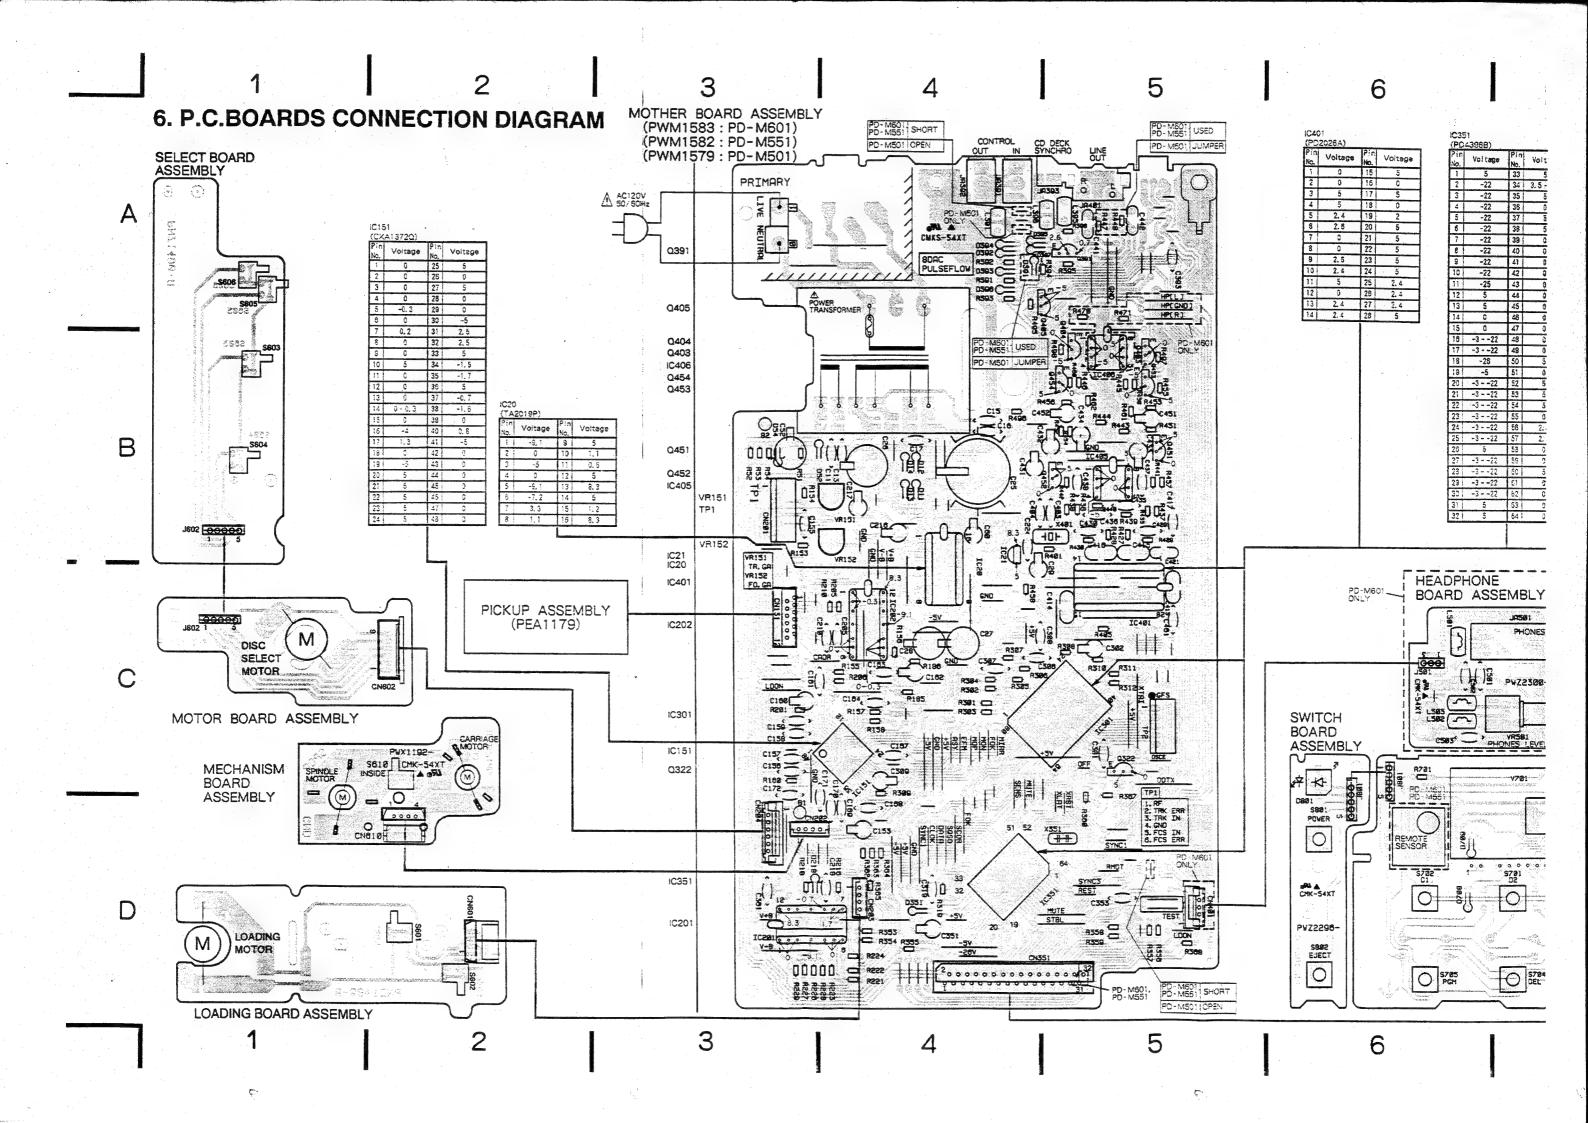


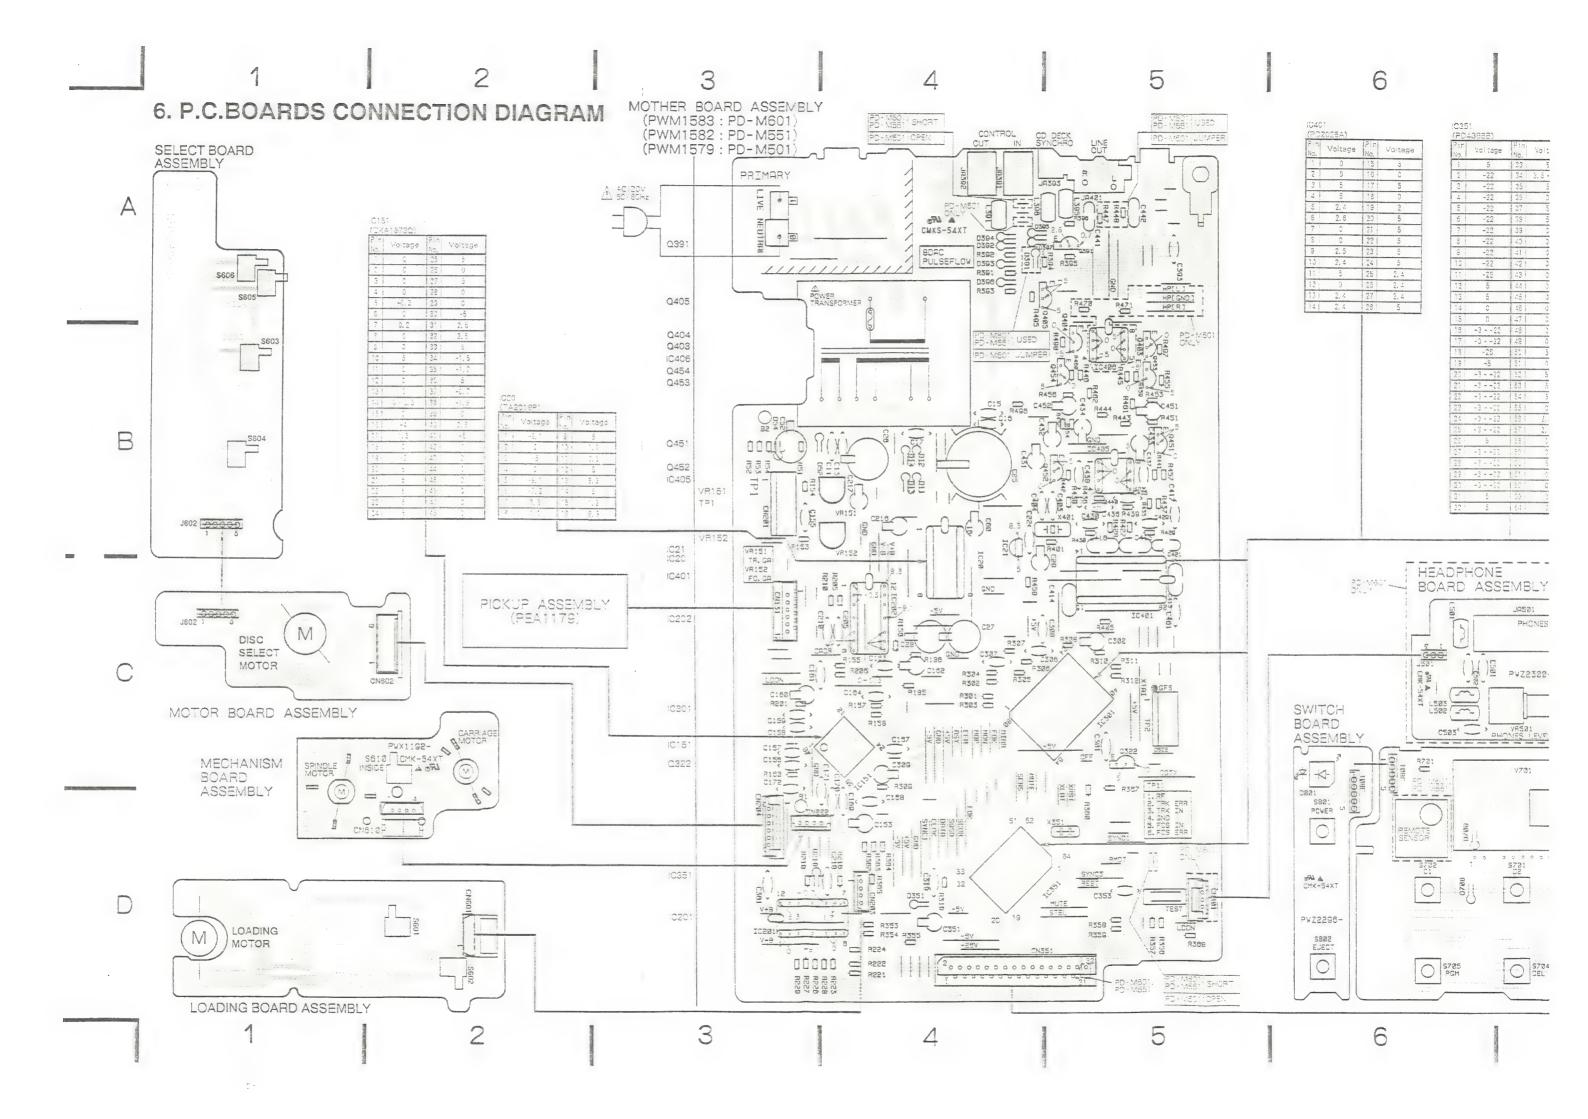


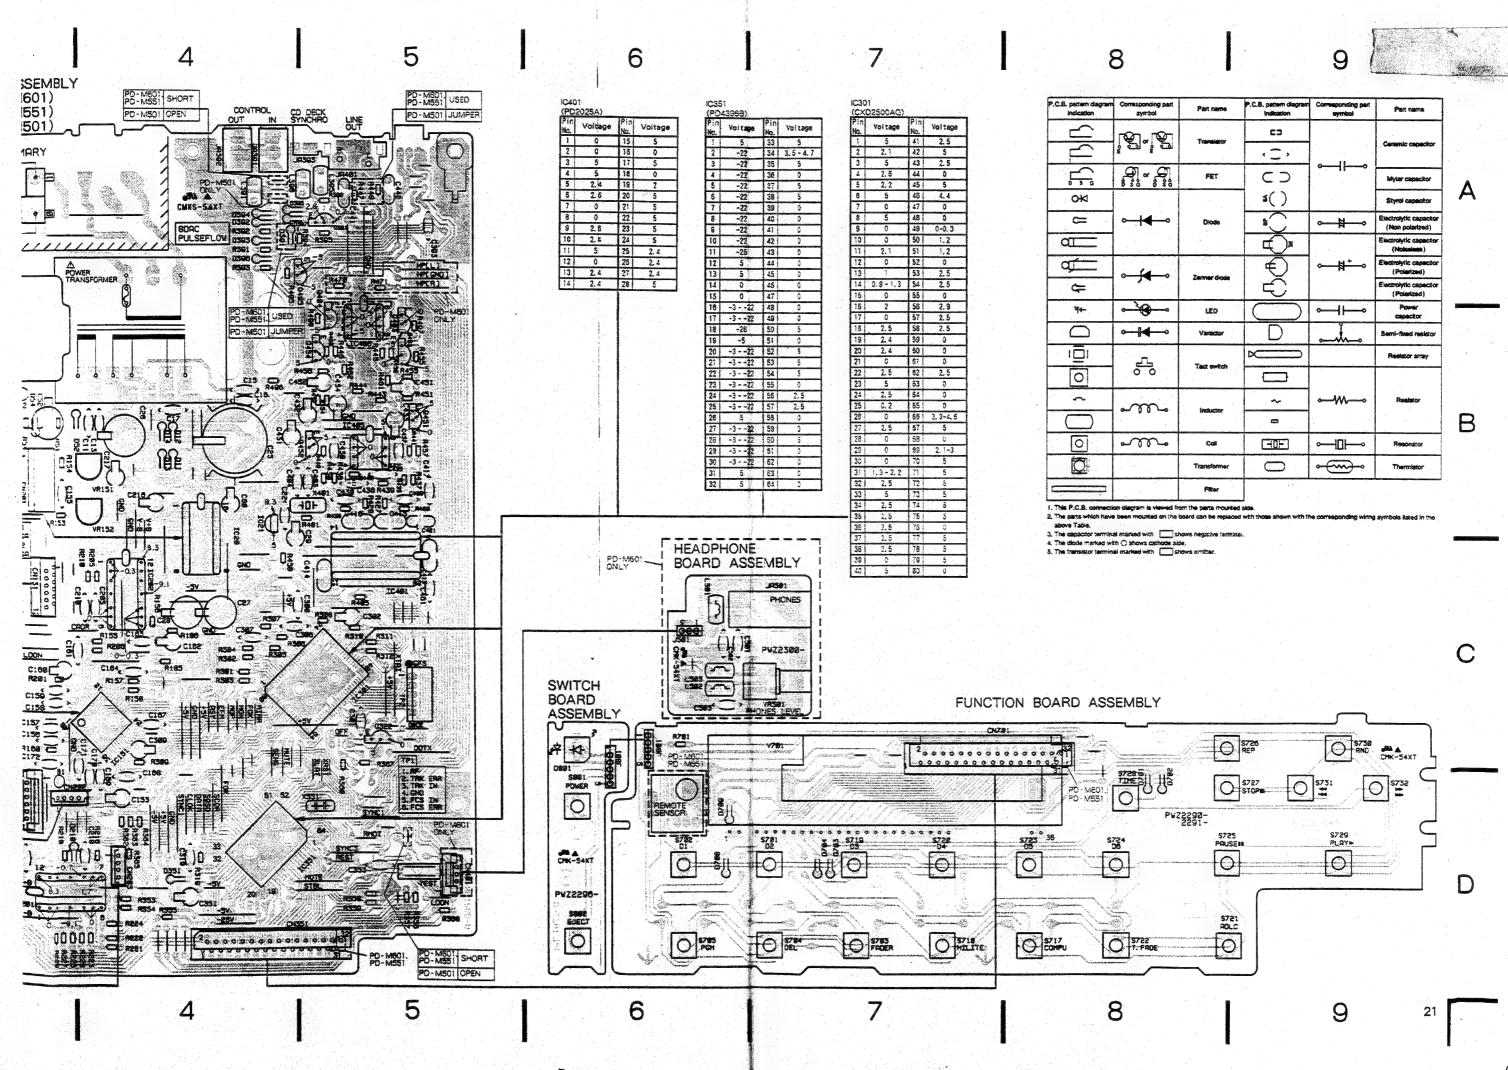


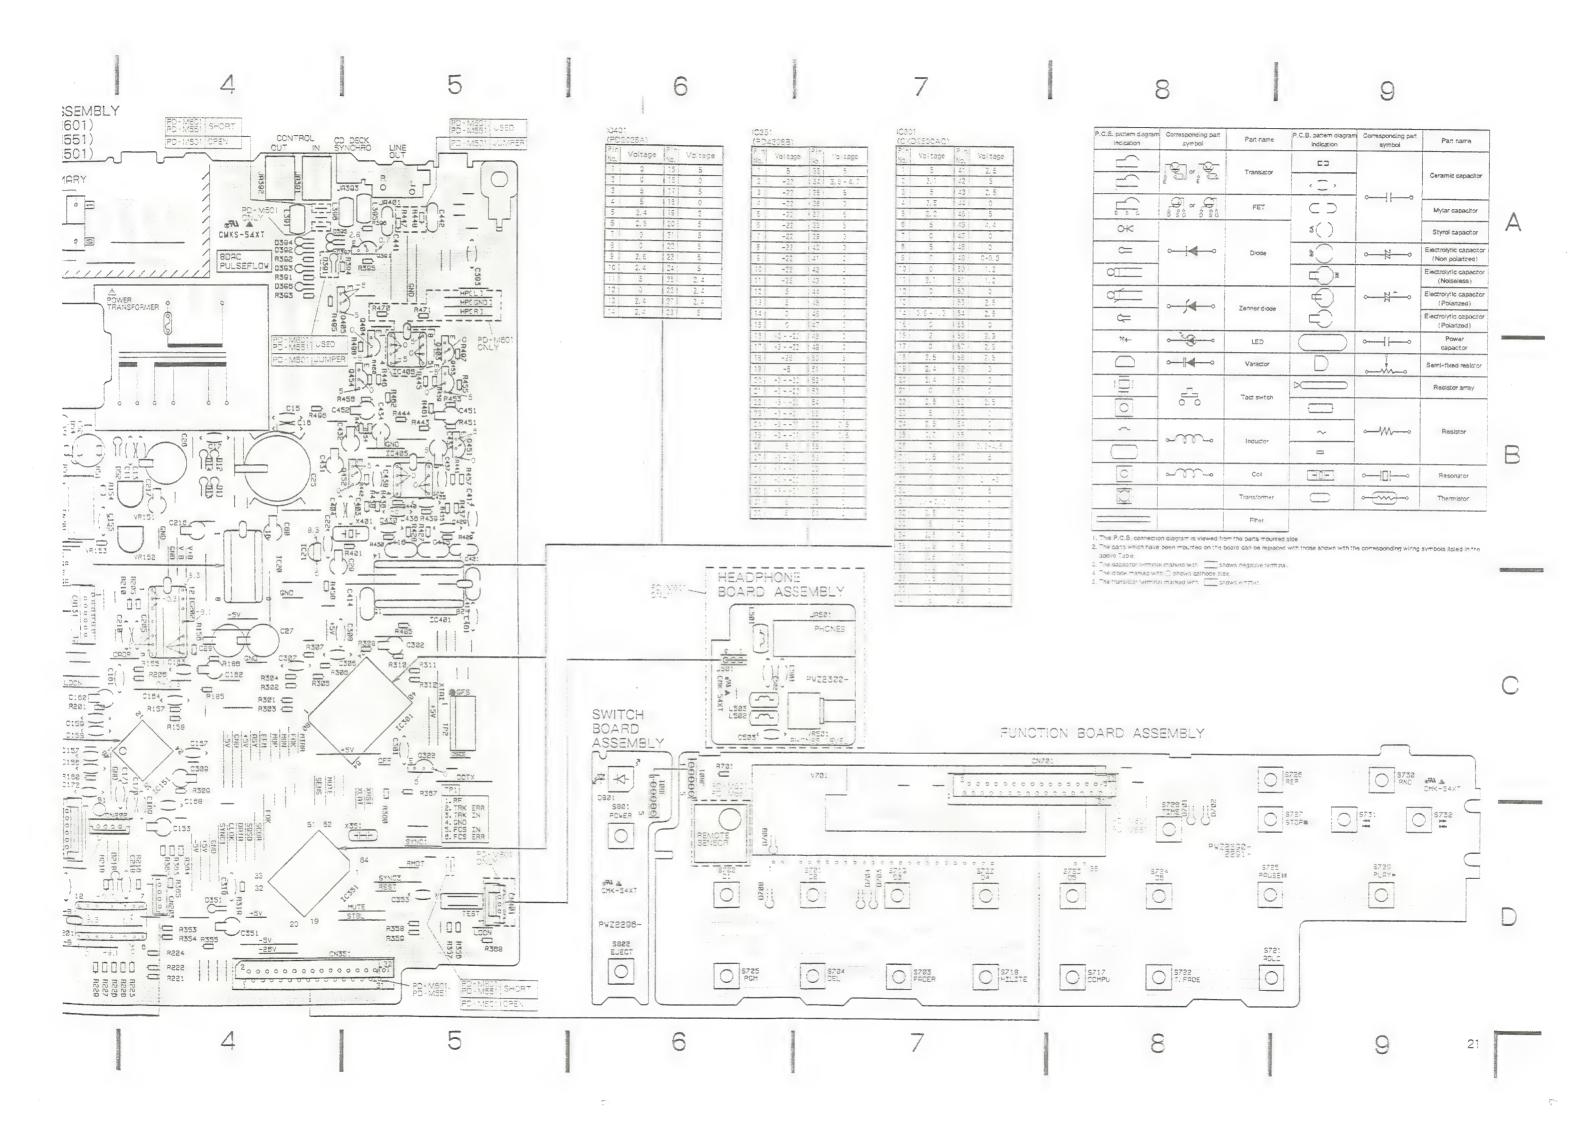

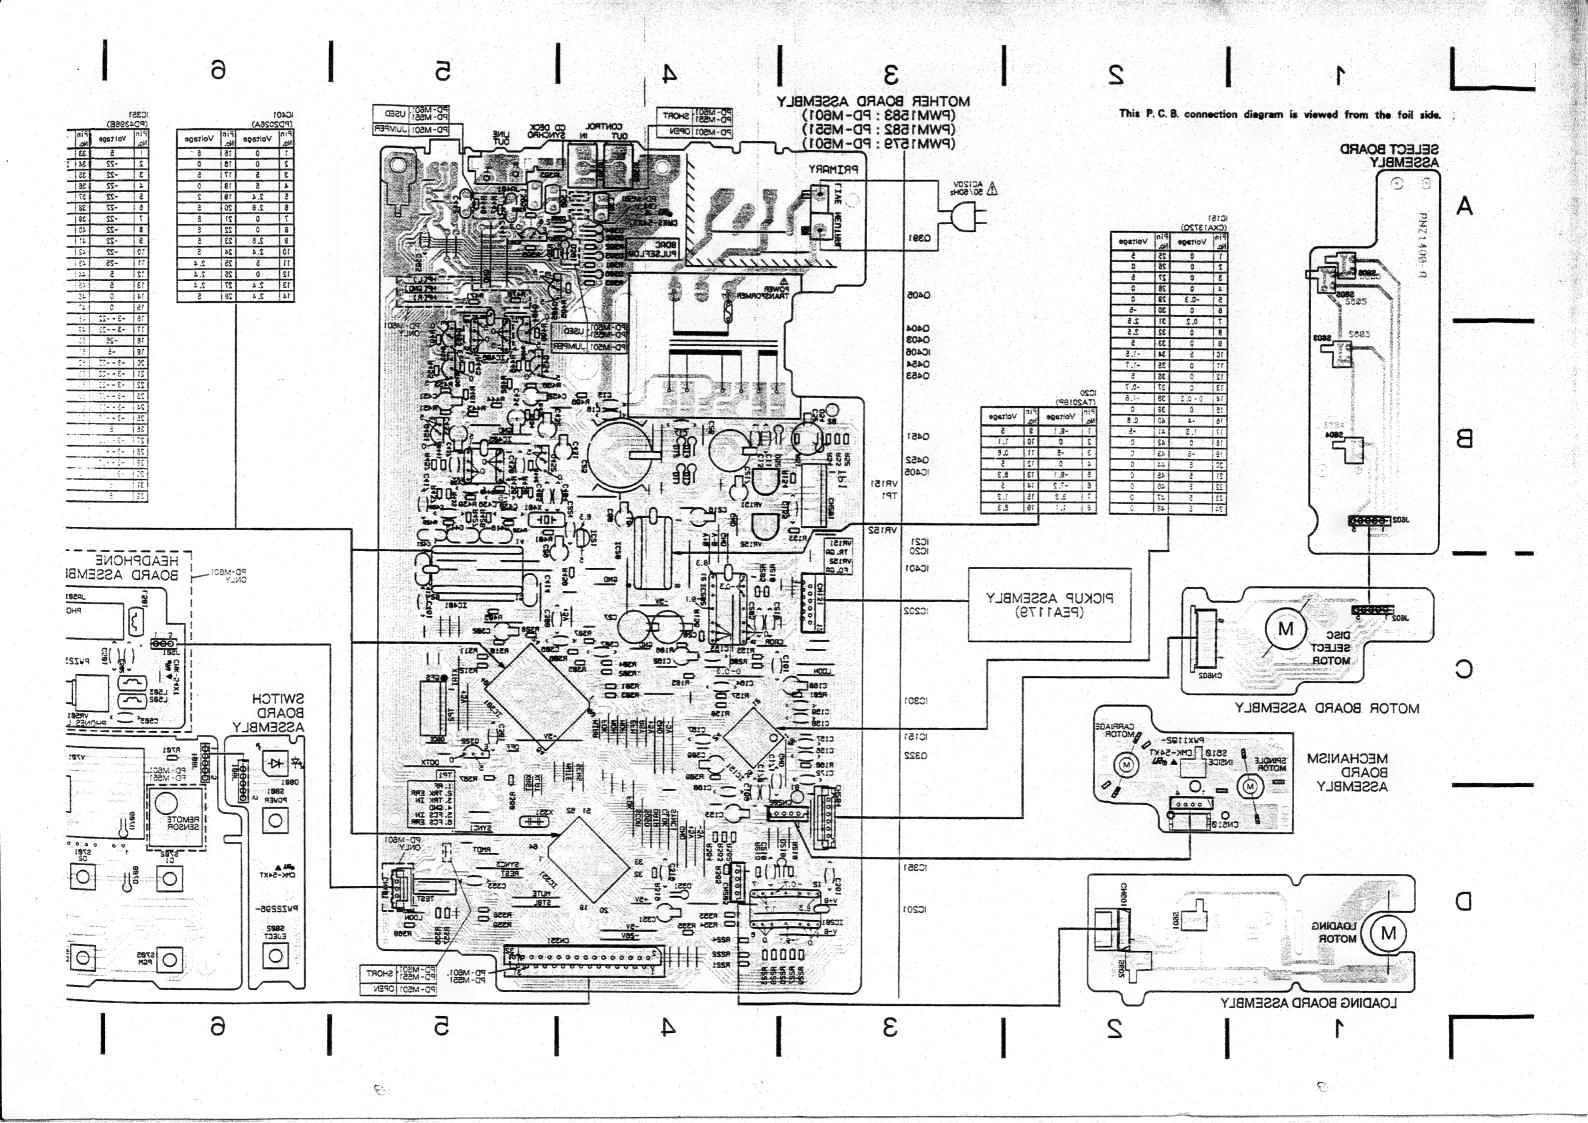

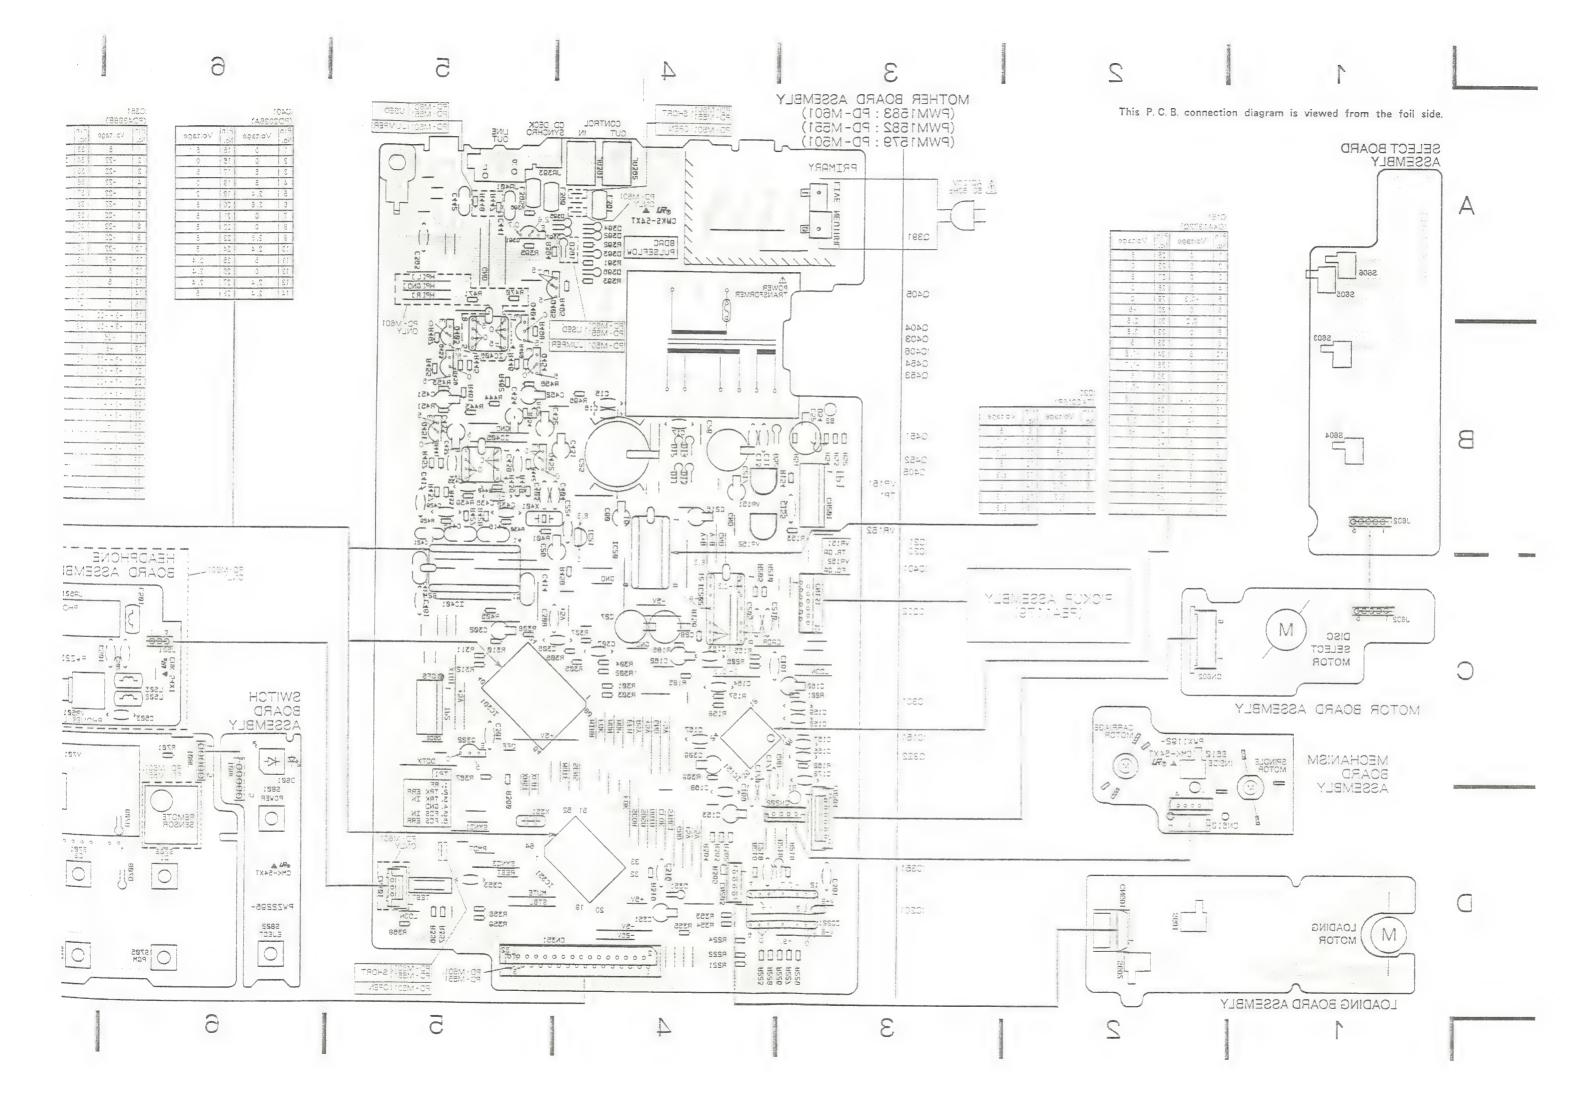

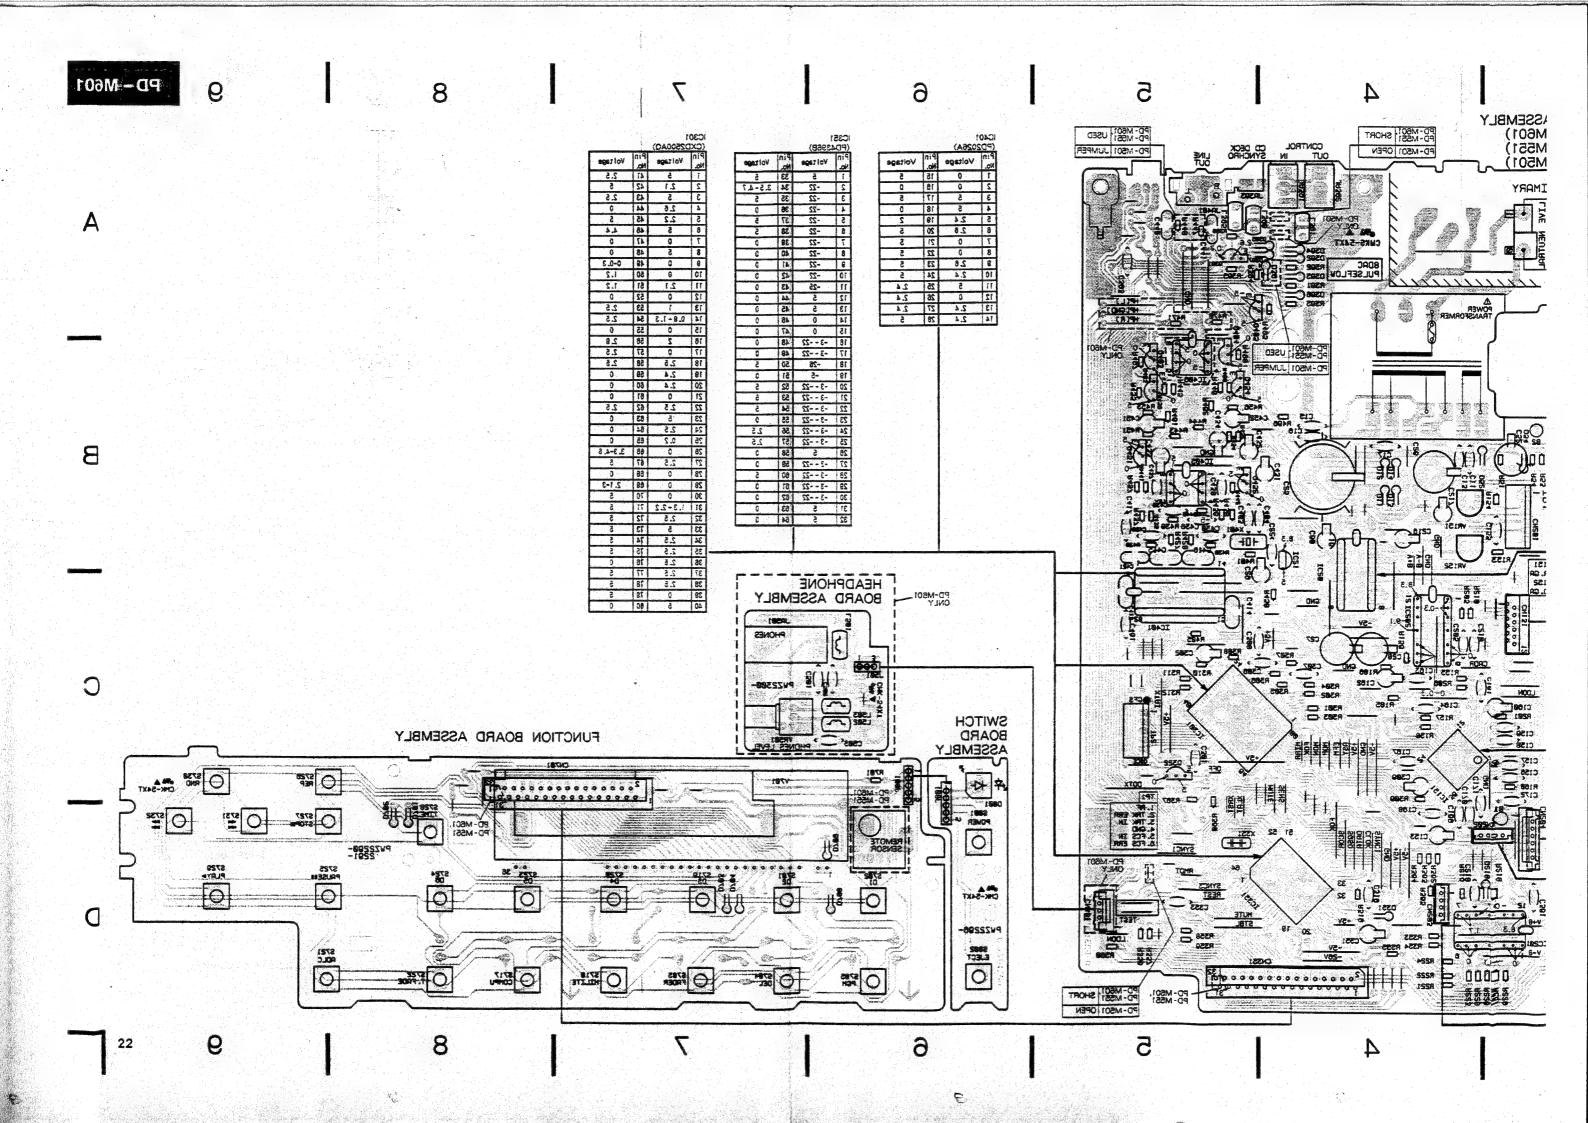

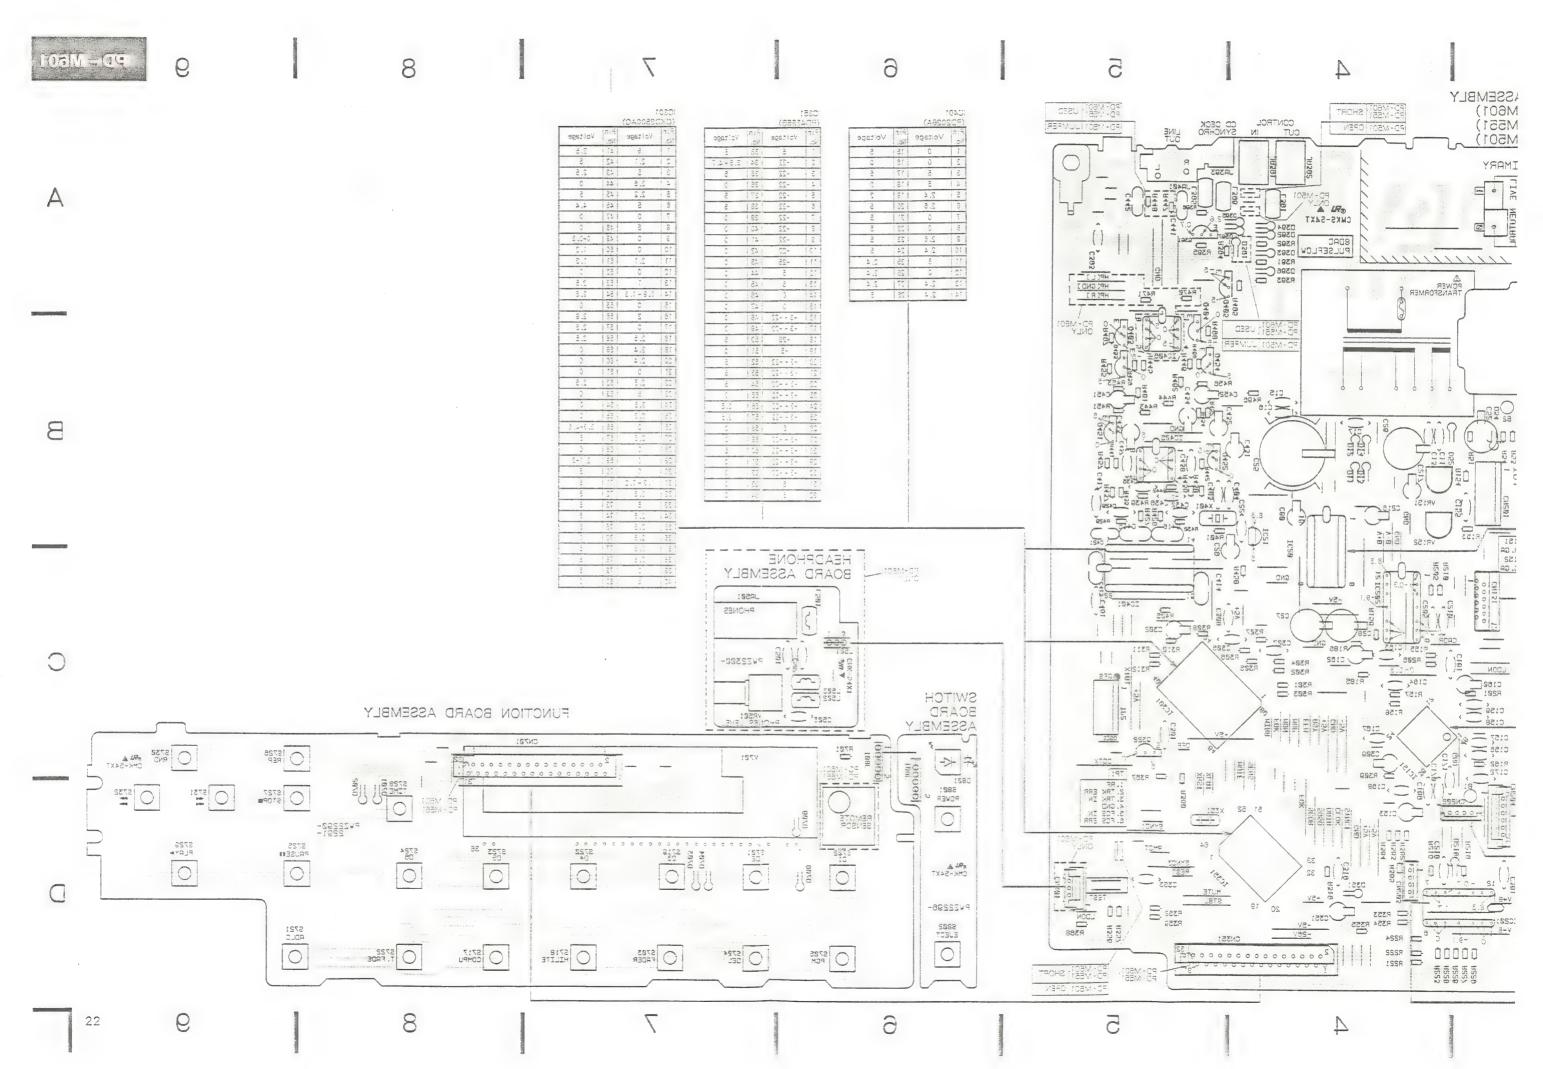

£ .



7. PCB PARTS LIST

NOTES

- Part without part number cannot be supplied.
- Parts marked by " @ " are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The △ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.
- Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).
 - 560Ω $56 \times 10'$ 561 RD1/8PM [5] [6] [1] J

 $47k \Omega$ $47 \times 10'$ 473 RD1/4PS [4] [7] [3] J

 0.5Ω 0.5Ω RN2H [0] [R] [5] K

 1Ω 0.10 RS1P [0] [1] [0] K
- Ex.2 When there are 3 effective digits(such as in high precision metal film resistors).

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
IST	OF AS	SEMBLIES		CAPA	CITORS		•
					C11, 13	CERAMIC CAPACITOR	CKCYF103Z50
\odot	Mother 1	ooard assembly	PWM1583		C15	CERAMIC CAPACITOR	CKCYF103Z50
	Motor be	pard assembly			C153	ELECTR. CAPACITOR	CEASIOIM10
	Mechanis	m board assembly			C155	CERAMIC CAPACITOR	CKCYB182K50
		board assembly			C156	CERAMIC CAPACITOR	CGCYX333K25
		ard assembly			0100	CDIMBIC CAI ACTION	CJC! A333A23
_					C157	CERAMIC CAPACITOR	CGCYX103K25
lacksquare		d assembly	PWX1224		C158, 159		CGCYX 104K25
	- Func	tion board assembly			C16	CERAMIC CAPACITOR	CKCYF 103Z50
	Swite	th board assembly			C160	ELECTR. CAPACITOR	CEAS4R7M50
	- Head	phone board assembly			C161	CERAMIC CAPACITOR	CGCYX 104K25
					C162	ELECTR. CAPACITOR	CEAS4R7M50
					C163	CERAMIC CAPACITOR	CGCYX 104K25
MO	THER	BOARD ASSEME	N V		C164	CERAMIC CAPACITOR	CGCYX 103K25
	WM158		-		C167	CERAMIC CAPACITOR	
(1	OCT INI AL	3)			C168		CKCYF 103Z50
EMIC	CONDUC	TORS			C108	CERAMIC CAPACITOR	CGCYX 333K25
	IC151	SERVO IC	CXA1372Q		C169	CERAMIC CAPACITOR	CGCYX 103K25
Δ	IC20	REGULATOR IC	TA2019P		C17	CERAMIC CAPACITOR	CKCYF 103Z50
$\overline{\Delta}$		POWER OP-AMP, IC	LA6520		C170	CERAMIC CAPACITOR	
	IC21	REGULATOR, IC	NJM2930L05			CERAMIC CAPACITOR	CKCYB332K50
	IC301	EFM DEMODULATION IC	CXD2500AQ				CKCYB 472K50
	10301	ETH DEMODULATION IC	CADESUUNG		C205, 210	CERAMIC CAPACITOR	CKCYF 103Z50
	IC351	MICROCOMPUTER, IC	PD4396B		C216, 217	ELECTR. CAPACITOR	CEAS3 30M16
	IC401	D/A CONVERTER, IC	PD2026A		C218	CERAMIC CAPACITOR	CGCYX 103K25
	IC405	OP-AMP IC	NJM4565D-D		C22	CERAMIC CAPACITOR	CKCYF 103Z50
	IC406	OP-AMP IC	BA15218		C25	ELECTR. CAPACITOR	CEAS3 32M16
	Q322	TRANSISTOR	DTC124ES		C26	ELECTR. CAPACITOR	
	4000	2.11.10.2010.1	D101D1D0		C20	BEBUIR CAPACITOR	CEAS1 O2M16
	Q391	TRANSISTOR	2SC1740S		C27	ELECTROLYTIC CAPACIT	CEAS4 71M6R3
	Q403, 404		2SD2144S		C28	ELECTR. CAPACITOR	CEASI OIM10
	Q405	TRANSISTOR	DTC124ES		C29	ELECTROLYTIC CAPACIT	CEAS4 71M6R3
	4 ,	TRANSISTOR	DTA124ES		C301	CERAMIC CAPACITOR	CGCYX 104K25
	Q453, 454	TRANSISTOR	2SB1296		C302	ELECTROLYTIC CAPACIT	CEAS4 71M6R3
Δ	D11-14	DIODE	11ES2		C306	CERAMIC CAPACITOR	CKCYB 152K50
	D218	ZENNER DIODE	MTZJ6. 2B		C307	CERAMIC CAPACITOR	CGCYX 473K25
	D351	DIODE	1SS254		C308	CERAMIC CAPACITOR	CGCYX 103K25
	D391-397		1SS254		C309	ELECTR. CAPACITOR	
Δ	D52	DIODE	11ES2		C351	ELECTROLYTIC CAPACIT	CEASR 47M50
44	D54	ZENNER DIODE	MTZJ18B		COSI	LLLCIROLITIC CAPACIT	CEASA 71M6R3
\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\					C353, 361	CERAMIC CAPACITOR	CKCYF 103Z50
COILS					C393	CERAMIC CAPACITOR	CCCSL 101J50
	L391	AXIAL INDUCTOR	LAU010K		C403	CERAMIC CAPACITOR	CCCH 120J50
	L395, 396	AXIAL INDUCTOR	LAU010K		C404	CERAMIC CAPACITOR	CCCH 220J50
					C413-416	FILM CAPACITOR (0.1 µ)	PCLID 32
					. •	(00 4 40 /	. 02[0]20



Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	C417 C<21	CERAMIC CAPACITOR FILM CAPACITOR (0.1 µ)	CKCYF103Z50 PCL1032			BOARD ASSEMBL	
	C429, 430	CERAMIC CAPACITOR	CCCCH390J50				. 1
		ELECTR. CAPACITOR	CEAS330M16	SEMI	CONDUC		
		ALUMINUM (22 µ/25V) CERAMIC CAPACITOR	PCH1107 CCCCH390J50		D701-704 D708, 709		1SS254 1SS254
	C441, 442	FILM CAPACITOR (0.0015 μ)	PCL1030	SWITE	CHEC		
	C451, 452	ELECTR. CAPACITOR	CEAS4R7M50	Omn		TACT SWITCH	PSG1006
	C461	CERAMIC CAPACITOR	CKCYF103Z50			DISC 2, 1, AUTO FADER, \	F301000
	C52	ELECTR. CAPACITOR	CEAS101M35			DELETE, PROGRAM	
	C60	ELECTR. CAPACITOR	CEAS010M50				
RESIS	TORS			,		TACT SWITCH	PSG1006
		VR(22kΩ)	RCP1046	- 1	COMPU PGN	EDIT, HI-LITE SCAN, DISC 3, 4	
	OTHER RES	•	RD1/6PM		DEDEAT	E FADE EDIT, DISC 5, 6, 11, I, TIME, ▶, RANDOM PLAY,	
				/	4 4 4	I, TIME, ▶, RANDOM PLAI,	
OTHE				•		,	1
	X351	CERAMIC RESONATOR	VSS1014				
	X401	(4. 19MHz) XTAL RES (OSC)	DOC: 000	RESIS			
	7401	(16. 9344MHz)	PSS1008		R701	CARBON FILM RESISTOR	RD1/6PM471J
	CN131	CONNECTOR FOR FFC (12P)	12FM-1. OBT	OTHE	RS		
		, , , , , , , , , , , , , , , , , , , ,	21 40%	•	REMOTE SE	NSOR	CDV1610 F1
	CN351	32P FFC CONNECTOR	HLEM32S-1		CN701	32P FFC CONNECTOR	SBX1610-51 HLEM32R-1
		JACK/12V (CONTROL IN, OUT)	PKN1004		V701	FL INDICATOR TUBE	PEL1067
	JA393	MINI JACK (CD DECK SYNCHRO)					1 551001
	JA401	2P PIN JACK (LINE OUT)	PKB1009				
				SWIT	сн во	ARD ASSEMBLY	
MOT	OR BO	ARD ASSEMBLY		SEMIC	ONDUC D801		
	Motor boa	rd assembly has not service	parts.		0001	LED	PCX1019
			,	SWITC	CHES		
					S801, 802	TACT SWITCH	PSG1006
MEC	R A NII C R	BOARD ASSEMB	ıv			(POWER, EJECT)	
SWITC		I BOARD ASSEMB	LY				
	S610	PUSH SWITCH (INSIDE)	DSG1016	HEAD	OPHON	E BOARD ASSEMB	LY
				COILS			
LOAD	NINC P	OADD ACCEMBLY			L501-503	AXIAL INDUCTOR	LAU010K
LOAL	JING B	OARD ASSEMBLY		0404	0.5000		
SWITC	HES			CAPA	CITORS	CERALIZA GARAGOS	
		PUSH SWITCH (LPS1, LPS2)	DSG1016		C501, 502	CERAMIC CAPACITOR	CKCYF103Z50
		(201, 51, 52, 52)	2001010		C303	CERAMIC CAPACITOR	CKCYF473Z50
				RESIS	TORS		
C=1 =					VR501	VARIABLE RESISTOR	PCS1003
SELE	CT BO	ARD ASSEMBLY				(PHONES LEVEL)	. 201000
SWITC	HES			OT: 15	20	•	
		PUSH SWITCH	DSG1016	OTHE		TIP A DIVINOUS A A MARK ASSESSMENT OF THE SECOND OF THE SE	
		(MZS1, MZS2, DCHM, DCNT)	PC01010		JA501	HEADPHONE JACK (PHONES)	RKN1002



8. ADJUSTMENTS

8.1. Adjustment Methods

If a disc player is adjusted incorrectly or inadequately, it may malfunction or not work at all even though there is nothing at all wrong with the pickup or the circuitry. Adjust correctly following the adjustment procedure.

Adjustment Items/Verification Items and Order

If the specified values cannot be obtained or no adjustment is possible by performing the verifications or adjustments described in steps 1-4, the pickup block may be defective.

Step	Item	Item Test Point	
1	Focus offset verification	TP1, Pin 6 (FCS. ERR)	None
2	Tracking error balance verification	TP1, Pin 2(TRK. ERR)	None
3	Pickup radial/tangential direction tilt adjustment	TP1, Pin 1 (RF)	Radial tilt adjustment screw, Tangential tilt adjustment screw
4	RF level verification	TP1, Pin 1 (RF)	None
5	Focus servo loop gain adjustment	TP1, Pin 5 (FCS. IN) TP1, Pin 6 (FCS. ERR)	VR152 (FCS. GAN)
6	Tracking servo loop gain adjustment	TP1, Pin 3 (TRK. IN) TP1, Pin 2 (TRK. ERR)	VR151 (TRK. GAN)

Abbreviation table


FCS. ERR :Focus Error
TRK. ERR :Tracking Error
FCS GAN :Focus Gain
TRK GAN :Tracking Gain
FCS. IN :Focus In
TRK. IN :Tracking In

Measuring Instruments and Tools

- 1. Dual trace oscilloscope (10:1 probe)
- 2. Low-frequency oscillator
- 3. Test disc (YEDS 7)
- 4. Low pass filter ($39k\Omega + 0.001 \mu F$)
- 5. Resistor (100 k Ω)
- 6. Standard tools



Test Point and Adjustment Variable Resistor Positions

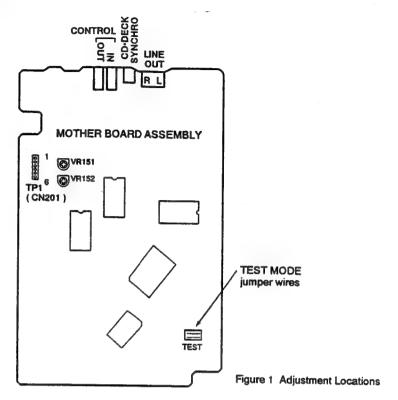

Notes

- 1. Use a 10:1 probe for the oscilloscope.
- 2. All the knob positions (settings) for the oscilloscope in the adjustment procedures are for when a 10:1 probe is used.

Test Mode

These models have a test mode so that the adjustments and checks required for service can be carried out easily. When these models are in test mode, the keys on the front panel work differently from normal. Adjustments and checks can be carried out by operating these keys with the correct procedure. For these models, all adjustments are carried out in test mode.

[Setting these models to test mode]

How to set this model into test mode.

- 1. Unplug the power cord from the AC socket.
- 2. Short the test mode jumper wires. (See Figure 1.)
- 3. Plug the power cord back into the AC socket.

When the test mode is set correctly, the display is different from what it usually is when the power is turned on. If the display is still the same as usual, test mode has not been set correctly, so repeat Steps 1-3.



[Release from test mode]

Here is the procedure for releasing the test mode:

- 1. Press the STOP key and stop all operations.
- 2. Unplug the power cord from the AC socket.

[Operations of the keys in test mode]

Code	Key Name	Function in Test Mode	Explanation
	PGM (PROGRAM)	Focus servo close	The laser diode is lit up and the focus actuator is lifted up, then lowered slowly and the focus servo is closed at the point where the objective lens is focused on the disc. With the player in this state, if you lightly rotate the stopped disc by hand, you can hear the sound the focus servo. If you can hear this sound, the focus servo is operating correctly. If you press this key with no disc mounted, the laser diode lights up, the focus actuator is pulled up, then the actuator is lowered and raised three times and returned to its original position.
Δ	PLAY	Spindle servo ON	Starts the spindle motor in the clockwise direction and when the disc rotation reaches the prescribed speed (about 500 rpm at the inner periphery), sets the spindle servo in a closed loop. Be careful. Pressing this key when there is no disc mounted makes the spindle motor run at the maximum speed. If the focus servo does not go correctly into a closed loop or the laser light shines on the mirror section at the outermost periphery of the disc, the same symptom is occurred.
	PAUSE	Tracking servo close/open	Pressing this key when the focus servo and spindle servo are operating correctly in closed loops puts the tracking servo into a closed loop, displays the track number being played back and the elapsed time on the front panel, and outputs the playback signal. If the elapsed time is not displayed or not counted correctly or the audio is not played back correctly, it may be that the laser is shining on the section with no sound recorded at the outer edge of the disc, that something is out of adjustment, or that there is some other problem. This key is a toggle key and open/close the tracking servo alternately. This key has no effect if no disc is mounted.



Code	Key Name	Function in Test Mode	5
₩.₩	TRACK / MANUAL SEARCH REV	Carriage reverse (inwards)	Moves the pickup position toward the inner diameter of the disc. When this key is pressed with the tracking servo in a closed loop, the tracking servo automatically goes into an open loop. Since the motor does not automatically stop at the mechanical end point in test mode, be careful with this operation.
∆. ₩	TRACK / MANUAL SEARCH FWD	Carriage forward (outwards)	Moves the pickup position toward the outer diameter of the disc. When this key is pressed with the tracking servo in a closed loop, the tracking servo automatically goes into an open loop. Since the motor does not automatically stop at the mechanical end point in test mode, be careful with this operation.
	STOP	Stop	Initializes and the disc rotation stops. The pickup and disc remain where they are when this key is pressed.
△	EJECT	CD magazine eject	Stores Disc 1 in the CD magazine, then ejects the CD magazine. However, even though the CD magazine is ejected, the pickup does not return to the park position. Even if the CD magazine is mounted again, the pickup remains where it is.


Note: When inserting the magazine, disc 1 of the magazine is loaded automatically.




[How to play back a disc in test mode]

In test mode, since the servos operate independently, playing back a disc requires that you operate the keys in the correct order to close the servos.

Here is the key operation sequence for playing back a disc in test mode.

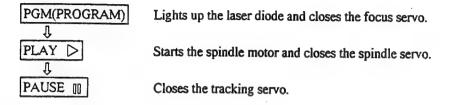

Wait at least 2-3 seconds between each of these operations.

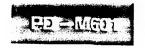

1. Focus Offset Verification

Objective	Verify the DC offset for the focus error amp.					
Symptom when out of adjustment	The model does not focus in and the RF signal is dirty.					
Measurement instru- ment connections	Connect the oscilloscope to TP1, Pin 6 (FCS. ERR)	● Player state	Test mode, stopped (just the Power switch on)			
	[Settings] 5 mV/division 10 ms/division	● Adjustment location	None			
	DC mode	● Disc	None needed			

Note: If the specified values cannot be obtained or no adjustment is possible by performing the verifications or adjustments described in adjustment items 1 - 4, the pickup block may be defective.




2. Tracking Error Balance Verification


Objective	To verify that there is no varia	o verify that there is no variation in the sensitivity of the tracking photo diode.				
Symptom when out of adjustment	Play does not start or track sea	lay does not start or track search is impossible.				
Measurement instru- ment connections	Connect the oscilloscope to TP1, Pin 2 (TRK. ERR). This connection may be via a low pass filter.	Player state Adjustment location	Test mode, focus and spindle servos closed and tracking servo open			
	[Settings] 50 mV/division 5 ms/division DC mode	● Disc	YEDS-7			

[Procedure]

- 1. Move the pickup to midway across the disc (R=35 mm) with the TRACK/MANUAL SEARCH FWD ▷▷ ▷▷ or REV | □□ □□ key.
- 2. Press the PGM (PROGRAM) key, then the PLAY > key in that order to close the focus servo then the spindle servo.
- 3. Line up the bright line (ground) at the center of the oscilloscope screen and put the oscilloscope into DC mode.
- 4. Supposing that the positive amplitude of the tracking error signal at TP1, pin 2 (TRK ERR) is (A) and the negative amplitude is (B), the following expression is satisfied.

$$A \ge B : \frac{A-B}{C} \times \frac{1}{2} \le 0.1$$
$$A < B : \frac{B-A}{C} \times \frac{1}{2} \le 0.1$$

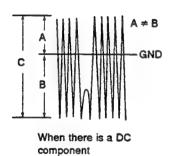

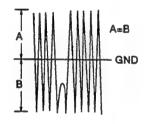

When there is no DC component




3. Pickup Radial/Tangential Tilt Adjustment

● Objective	To adjust the angle of the pickup relative to the disc so that the laser beams are shone straight down into the disc for the best read out of the RF signals. Sound broken; some discs can be played but not others.				
 Symptom when out of adjustment 					
Measurement instru- ment connections	Connect the oscilloscope to TP1, Pin 1 (RF).		● Player state	Test mode, play	
	[Settings]	20 mV/division 200 ns/division AC mode	Adjustment location Disc	Pickup radial tilt adjustment screw and tangential tilt adjustment screw YEDS-7	

[Procedure]

- 1. Press the TRACK/MANUAL SEARCH FWD ▷▷ ▷▷ or REV I ▷□ ▷□ key to move the pickup to halfway across the disc (R=35mm).
 - Press the PGM (PROGRAM) key, the PLAY \triangleright key, then the PAUSE [][] key in that order to close the respective servos and put the player into play mode.
- 2. First, adjust the radial tilt adjustment screw with a Phillips screwdriver so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly.
- 3. Next, adjust the tangential tilt adjustment screw with a Phillips screwdriver so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly (Figure 3).
- 4. Adjust the radial tilt adjustment screw and the tangential tilt adjustment screw again so that the eye pattern can be seen the most clearly. As necessary, adjust the two screws alternately so that the eye pattern can be seen the most clearly.
- 5. When the adjustment is completed, lock the radial and tangential adjustment screw. Note:Radial and tangential mean the directions relative to the disc shown in Figure 2.

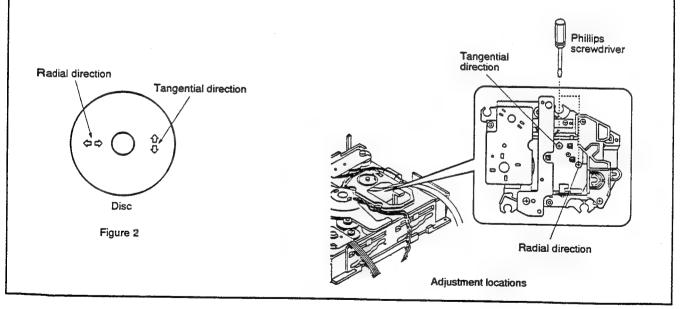



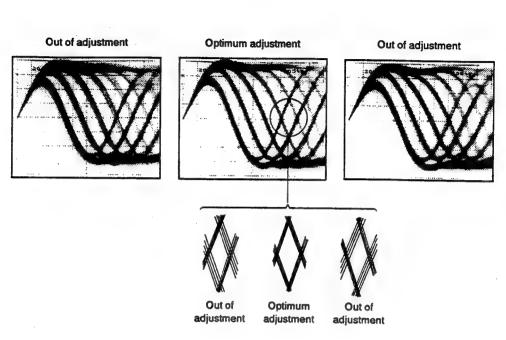


Figure 3 Eye pattern



4. RF Level Verification

Objective	To verify t	o verify the playback RF signal amplitude				
 Symptom when out of adjustment 	No play or	o play or no search				
Measurement instru- ment connections	Connect the oscilloscope to TP1, Pin 1 (RF).		Player state	Test mode, play		
	[Settings]	50 mV/division 10 ms/division	● Adjustment location	None		
		AC mode	● Disc	YEDS-7		

[Procedure]

- 1. Move the pickup to midway across the disc (R=35 mm) with the TRACK/MANUAL SEARCH FWD ▷▷ · ▷▷ or REV | ▷▷ · ▷▷ key, then press the PGM (PROGRAM) key, the PLAY ▷ key, then the PAUSE [] key in that order to close the respective servos and put the player into play mode.
- 2. Verify the RF signal amplitude is 1.2 Vp-p \pm 0.2 V.



5. Focus Servo Loop Gain Adjustment

● Objective	To optimize the focus servo loop g	o optimize the focus servo loop gain.					
Symptom when out of adjustment	Playback does not start or focus actuator noisy.						
Measurement instru- ment connections	See figure 4. [Settings]	● Player state	Test mode, play				
	CH1 CH2 20 mV/division 5 mV/division	Adjustment location	VR152 (FCS. GAN)				
	X-Y mode	• Disc	YEDS-7				

[Procedure]

- 1. Set the AF generator output to 1.2 kHz and 1 Vp-p.
- 2. Press the TRACK/MANUAL SEARCH FWD DD DD or REV DD Add key to move the pickup to halfway across the disc (R=35 mm), then press the PGM (PROGRAM) key, the PLAY DD key, then the PAUSE Wey in that order to close the corresponding servos and put the player into play mode.
- 3. Adjust VR152 (FCS. GAN) so that the Lissajous waveform is symmetrical about the X axis and the Y axis.



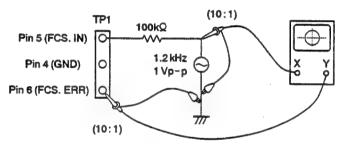


Figure 4


Focus Gain Adjustment

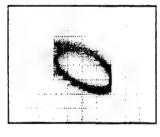

Higher gain

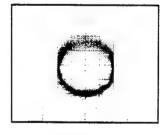

Optimum gain

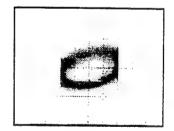

Lower gain



6. Tracking Servo Loop Gain Adjustment

● Objective	To optimize the tracking servo loc	o optimize the tracking servo loop gain.					
Symptom when out of adjustment	Playback does not start, during sea	ayback does not start, during searches the actuator is noisy, or tracks are skipped.					
Measurement instru- ment connections	See Figure 5.	Player state	Test mode, play				
	[Settings] CH1 CH2	Adjustment location	VR151 (TRK. GAN)				
	50 mV/division 20 mV/division X-Y mode	• Disc	YEDS-7				

[Procedure]

- 1. Set the AF generator output to 1.2 kHz and 2 Vp-p.
- 2. Press the TRACK/MANUAL SEARCH FWD DD DD or REV | DD DD week to move the pickup to halfway across the disc (R=35 mm), then press the PGM (PROGRAM) key, the PLAY D key, then the PAUSE | | key in that order to close the corresponding servos and put the player into play mode.
- 3. Adjust VR151 (TRK. GAN) so that the Lissajous waveform is symmetrical about the X axis and the Y axis.


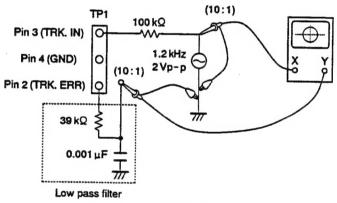


Figure 5


Tracking Gain Adjustment



Higher gain

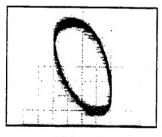

Optimum gain

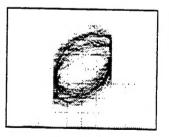

Lower gain

PD-M60T, PD-M55T, PD-M501

● MOTHER BOARD ASSEMBLY (PWM1582 and PWM1579)

PWM1582, PWM1579 and PWM1583 have the same construction except for the following:


Mark	Symbol 9 Description				
Iviark	Symbol & Description	PWM1583	PWM1582	PWM1579	Remarks
I	IC405 IC406 D391 C433, 434 (22 <i>μ /</i> 25V)	NJM4565D-D BA15218 1SS254 PCH1107	NJM4558D-D 1SS254	NJM4558D-D	
I I	C433, 434 R445, 446 R447, 448 R470, 471 CN351 (32P FFC connector) CN351 (30P FFC connector)	RD1/6PM271J RD1/6PM471J RD1/6PM470J HLEM32S - 1	CEAS220M25 RD1/6PM681J HLEM32S-1	CEAS220M25 RD1/6PM681J HLEM30S-1	

FUNCTION BOARD ASSEMBLY

Function board assembly of PD - M551 and PD - M501 and Function board assembly of PD - M601 have the same construction except for the following :

Mark	Symbol & Description	Part No.			
		PD-M601	PD-M551	PD-M501	Remarks
	CN701 (32P FFC connector) CN701 (30P FFC connector) Remote sensor	HLEM32R-1 SBX1610-51	HLEM32R-1 SBX1610-51	HLEM30R-1	


10. PANEL FACILITIES

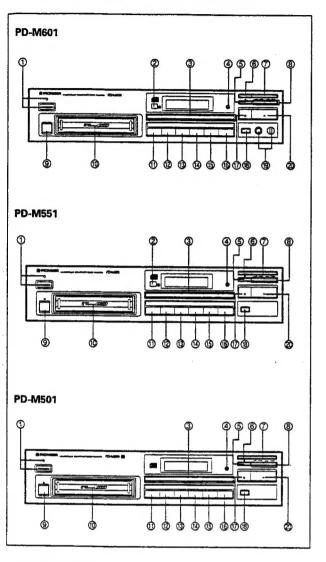

FRONT PANEL

- ① POWER STANDBY/ON switch and STANDBY indicator
- ② Remote sensor (PD-M601/PD-M551 only)
 Receives the signal from the remote control unit.
 - The PD-M501 is not equipped with the remote sensor.
- 3 Disc number buttons (DISC 1 DISC 6)
- 4 TIME button
- (S) Stop button (3)
- **®** REPEAT button
- 7 RANDOM PLAY button
- ® Track/Manual search buttons (►► ►►►)
- ⑤ EJECT button (▲)
- 10 Magazine insertion slot
- 1 PROGRAM button
- 12 DELETE button

- **(13) AUTO FADER button**
- (14) HI-LITE SCAN button
- (5) COMPU PGM EDIT button
- **16 TIME FADE EDIT button**
- Pause button (II)
- (B) ADLC (Automatic Digital Level Controller) button
- (9) Headphones jack (PHONES) and headphones volume control (PHONES LEVEL) (PD-M601 only)
- ② Play button (►)

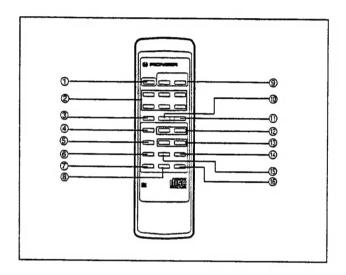

REMOTE CONTROL UNIT (PD-M601/PD-M551 only)

Remote control buttons with the same names or marks as buttons on the front panel of the player control the same operations as the corresponding front panel buttons.

- 1 POWER button
- ② DISC NUMBER buttons (1-6)
- ③ STOP button (■)
- **4** RANDOM PLAY button
- **5** HI-LITE SCAN button
- 6 FADER button
- ADLC (Automatic Digital Level Controller)
 button
- **® CHECX button**
- OUTPUT LEVEL buttons (+/-)
- 10 PAUSE button (11)
- ① PLAY button (►)
- ③ TRACK search buttons (► / ►)
- **14** DELETE button
- (5) PGM (program) button
- **(16)** CLEAR button

11. SPECIFICATIONS

1. General Type Compact disc digital audio system Power requirements U.K. and Australian modelsAC 220 - 240 V, 60 Hz U.S. and Canadian modelsAC 120 V, 60 Hz Other modelsAC 110 - 127V/220 - 240 V (switchable), Power consumption U.S. and Canadian models12 W U.K., Australian and other models14 W Operating temperature +5°C - +35°C (+41°F - +95°F) Weight 3.8 kg (8 lb, 6 oz) External dimensions PD-M601/PD-551420 (W) X 291(D) X 105 (H) mm 16-9/16 (W) X11-7/16 (D) X 4-1/8 (H) in420 (W) X 291(D) X 100 (H) mm 16-9/16 (W) X 11-7/16 (D) X 3-15/16 (H) in 2. Audio section Frequency response 2 Hz - 20 kHz S/N ratio 102 dB or more (EIAJ) Harmonic distortion 0.003% or less (EIAJ) Output voitage 2.0V Wow and flutter Limit of mesurement

Channels 2-channel (stereo)

±0.001% W₂PEAK) or less (EIAJ)

3. Output terminal

Audio line output

Headphone jack with volume control (PD-M601/PD-M551 only)
Control input/output jacks (available with the PD-M551/PD-M501 and U.S. and Canadian models of the PD-M601)
CD-DECK SYNCHRO jack

4. Accessories

•	Remote control unit (PD-M601/PD-M551 only)	.1
•	Size AAA/R03/dry batteries	
	(PD-M601/PD-M551 only)	.2
•	Six-compact-disc magazine	.1
•	Control cord (provided with PD-M551/PD-M501	
	and U.S. and Canadian models of PD-M601 only)	.1
•	Output cord	.1
•	Operating instructions	.1

NOTE:

Specifications and design subject to possible modification without notice, due to improvements.

The Magazine Type Multi-Play CD Players with (2022) mark and the Magazines with the same mark are compatible for 5-inch (12cm) discs.